

# REPLACEMENT PARTS GUIDE

## 330G Skid Steer Loader (PIN:1T0330G-F300253-)



**CAB FRESH AIR FILTER ELEMENT (IF EQUIPPED) - [AT441536](#)**  
**CAB RECIRCULATION AIR FILTER ELEMENT (IF EQUIPPED) - [AT359416](#)**  
 Interval (hrs) - As Required.

**HYDRAULIC OIL FILTER ELEMENT (IF EQUIPPED (IF EQUIPPED))**  
**[AT495722](#)**  
 Interval (hrs) - 1000.

**HYDROSTATIC OIL FILTER ELEMENT**  
**[AT314164](#)**  
 Interval (hrs) - 1000.

**DUST UNLOADER VALVE**  
**[R48568](#)**  
 Interval (hrs) - As Required.

**FUEL TANK BREATHER (331G AND 333G ONLY)**  
**[H216169](#)**  
 Interval (hrs) - 1000.

**AUXILIARY FUEL TANK BREATHER (331G AND 333G ONLY)**  
**[H216169](#)**  
 Interval (hrs) - 1000.

**DIESEL EXHAUST FLUID (DEF) TANK BREATHER**  
**[H216169](#)**  
 Interval (hrs) - 4000.

**HYDRAULIC OIL RESERVOIR BREATHER**  
**[AT101565](#)**  
 Interval (hrs) - 500.

**ENGINE AIR FILTER ELEMENT—PRIMARY**  
**PRIMARY - [KV16429](#)**  
**SECONDARY - [AT171854](#)**  
 Interval (hrs) - As Required.

**ENGINE OIL FILTER ELEMENT**  
**[MIU800650](#)**  
 Interval (hrs) - 500.

**ENGINE ROCKER ARM COVER GASKET**  
**[MIU802567](#)**  
 Interval (hrs) - 1500.

**FINAL FUEL FILTER ELEMENT**  
**[MIU802154](#)**  
 Interval (hrs) - 500.

**DIESEL PARTICULATE FILTER (DPF) (COMPONENT OF EXHAUST FILTER)**  
**[MIU804396](#)**  
 Interval (hrs) - As Required.





**PRIMARY FUEL FILTER ELEMENT**  
**[MIU802421](#)**  
 Interval (hrs) - 500.

**DIESEL EXHAUST FLUID (DEF) DOSING UNIT FILTER**  
**[RE554498](#)**  
 Interval (hrs) - 2000.

**DIESEL EXHAUST FLUID (DEF) HEADER SUCTION FILTER AND BAFFLE**  
**[AT484543](#)**  
 Interval (hrs) - 2000.

# REPLACEMENT PARTS GUIDE

## 330G Skid Steer Loader (PIN:1T0330G-F300253-)

Part Description	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil <sup>2</sup> 	12.6 L(3.3 gal)	500
John Deere Hydrau™ Hydraulic and Hydrostatic Oil <sup>2</sup> 	33.1 L(8.7 gal)	1000
John Deere Hy-Gard™ Chain Case Oil <sup>2</sup> per side) (330G and 332G only) 	20.8 L(5.5 gal)	1000
John Deere Cool-Gard™ II Pre-Mix 	14.9 L(3.9 gal)	6000
Fluid Analysis Test Kits <sup>3</sup>		
Diesel Engine Oil	1	250
Hydraulic Oil	1	500
Engine Coolant	1	500
<sup>2</sup> See operator's manual for recommended oil type and oil viscosities based on operating temperatures. <sup>3</sup> Based on fluid analysis results, intervals may need to be adjusted for operating conditions. See an authorized John Deere dealer.		

Plus-50 is a trademark of Deere & Company  
 Hydrau is a trademark of Deere & Company  
 Hy-Gard is a trademark of Deere & Company  
 Cool-Gard is a trademark of Deere & Company

## Service Intervals

330G Skid Steer Loader (PIN:1T0330G-F300253-)	
<b>As Required</b>	
<input type="checkbox"/> Check and clean cooling package	<input type="checkbox"/> Check cab recirculation air filter (if equipped)
<input type="checkbox"/> Check tire pressure (330G and 332G only)	<input type="checkbox"/> Check wheel lug nut torque (330G and 332G only)
<input type="checkbox"/> Check and drain primary fuel filter and water separator	<input type="checkbox"/> Check accessory drive belt
<input type="checkbox"/> Drain water and sediment from fuel tank	<input type="checkbox"/> Service exhaust filter
<input type="checkbox"/> Replace primary engine air filter element	<input type="checkbox"/> Check and adjust steering mistracking
<input type="checkbox"/> Replace secondary engine air filter element (every third primary element replacement or as needed)	<input type="checkbox"/> Clean and tighten battery terminals
<input type="checkbox"/> Check cab fresh air filter (if equipped)	
<b>Every 10 Hours or Daily</b>	
<input type="checkbox"/> Check engine oil level	<input type="checkbox"/> Lubricate boom linkage, cylinder pivot points, and Quik-Tatch™ linkage
<input type="checkbox"/> Check coolant level	<input type="checkbox"/> Lubricate anti-vibration bogie pivot (if equipped) (331G and 333G only)
<input type="checkbox"/> Check hydraulic oil level	
<b>Initial Service—50 Hours<sup>1</sup></b>	
<input type="checkbox"/> Drain and refill hydrostatic planetary gear case oil (331G and 333G only)	
<b>Every 50 Hours</b>	
<input type="checkbox"/> Check and clean dust unloader valve	<input type="checkbox"/> Check track tension (331G and 333G only)
<b>Every 250 Hours</b>	
<input type="checkbox"/> Take engine oil sample	
<b>Every 500 Hours</b>	
<input type="checkbox"/> Drain and refill engine oil and replace oil filter	<input type="checkbox"/> Replace hydraulic oil reservoir breather
<input type="checkbox"/> Drain and refill hydrostatic planetary gear case oil (331G and 333G only)	<input type="checkbox"/> Check chain case oil level (330G and 332G only)
<input type="checkbox"/> Replace primary fuel filter and water separator	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Replace final fuel filter	<input type="checkbox"/> Take engine coolant sample
<b>Every 1000 Hours</b>	
<input type="checkbox"/> Check coolant condition	<input type="checkbox"/> Drain and refill hydraulic oil and replace filter elements
<input type="checkbox"/> Replace fuel tank breather	<input type="checkbox"/> Drain and refill chain case oil (330G and 332G only)
<input type="checkbox"/> Replace auxiliary fuel tank breather (331G and 333G only)	
<b>Every 1500 Hours</b>	
<input type="checkbox"/> Check and adjust engine valve lash	
<b>Every 2000 Hours</b>	
<input type="checkbox"/> Replace diesel exhaust fluid (DEF) dosing unit filter	<input type="checkbox"/> Clean diesel exhaust fluid (DEF) tank
<input type="checkbox"/> Replace diesel exhaust fluid (DEF) header suction filter	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) baffle
<b>Every 4000 Hours</b>	
<input type="checkbox"/> Replace diesel exhaust fluid (DEF) tank breather filter	
<b>Every 6000 Hours</b>	
<input type="checkbox"/> Drain and refill cooling system	