




REPLACEMENT PARTS GUIDE


6E-1404 Tractor (China Edition)


ENGINE

 **OIL FILTER**
RE504836 (ENGINE OIL FILTER)
Replace the oil filter in initial 100hrs, for every 250Hrs and 500hrs.

 **PRIMARY AIR FILTER**
AL150288 (AIR CLEANNER)
Replace for every 1500hrs.

 **SECONDARY AIR FILTER**
AL172780 (AIR CLEANNER)
Replace for every 4500 hrs.

 **PRIMARY FUEL FILTER**
RE541922 (FILTER ELEMENT)
Replace for every 500 hrs.

 **FINAL FUEL FILTER**
RE541924
RE541925 (FILTER ELEMENT)
Replace for every 500 hrs.



CAB

 **RECIRCULATION AIR FILTER**
RE195491
Replace for every 4500hrs.

 **FRESH AIR FILTER**
RE198488
Replace for every 1500hrs.

HYDRAULIC

 **SJ11792 (HYDRAULIC OIL FILTER)**
Replace the Hydraulic oil filter for every 100hrs.



CAPACITIES

6E-1404 Tractor (China Edition)

CAPACITIES (Approximate):

Fuel Tank:

Open Operator Station225 L (59.43 gal)

Cooling System: Cool-Gard™ II

Open Operator Station 23 (6.07gal)

Transmission and Hydraulic System:

Hy-Gard™

1404..... 60 L (15.85 gal)

Mechanical Front Wheel Drive (MFWD) Axle Housing: Hy-Gard™

1404..... 5.0 L (1.3 gal)

Mechanical Front Wheel Drive (MFWD) Hubs (Each): Hy-Gard™

1404..... 0.8 L (0.2 gal)

REPLACEMENT PARTS GUIDE

6E-1404 Tractor (China Edition)

CAB



SEAT
[SJ31407](#) (W/O ARMREST)
[SJ31428](#) (BOTTOM)
[SJ31429](#) (BACK)

AXLE



TIE ROD
[AL150098](#) (ELECTRONIC HANDLE
THROTTLE CONTROL)
[AL204774](#) (TIE ROD, MFWD)
[AL204776](#)



ENGINE



BRAKE DISK
[AL160176](#) (DIFFERENTIAL
GEAR MULTIPLE DISK)
[SU34458](#) (HAND BRAKE DISK)



CLUTCH DISK
[SU52537](#) (CLUTCH, HIGH CAPACITY)



ALTERNATOR
[SJ24309](#) (90 A)



BELT DRIVE
[L153280](#) (FAN DRIVE, 12L153280 0 HP,
1910 mm)
[L111600](#) (FAN DRIVE, 2460 mm)



BATTERY
[SJ19484](#) (WET CHARGED BATTERY)