

REPLACEMENT PARTS GUIDE

333G Compact Track Loader (PIN:1T0333G___E314413-387237)



CAB FRESH AIR FILTER ELEMENT (IF EQUIPPED) - [AT441536](#)
CAB RECIRCULATION AIR FILTER ELEMENT (IF EQUIPPED) - [AT359416](#)
 Interval (hrs) - As Required.

HYDRAULIC OIL FILTER ELEMENT (IF EQUIPPED) - [AT495722](#)
 Interval (hrs) - 1000.

HYDROSTATIC OIL FILTER ELEMENT - [AT314164](#)
 Interval (hrs) - 1000.

DUST UNLOADER VALVE - [R48568](#)
 Interval (hrs) - As Required.

AUXILIARY FUEL TANK BREATHER (331G AND 333G ONLY) - [H216169](#)
 Interval (hrs) - 1000.

HYDRAULIC OIL RESERVOIR BREATHER - [AT101565](#)
 Interval (hrs) - 500.



ENGINE AIR FILTER ELEMENT—PRIMARY - [KV16429](#)
SECONDARY - [AT171854](#)
 Interval (hrs) - As Required.

ENGINE OIL FILTER ELEMENT - [MIU800650](#)
 Interval (hrs) - 500.

ENGINE ROCKER ARM COVER GASKET - [MIU802567](#)
 Interval (hrs) - 1500.

FINAL FUEL FILTER ELEMENT - [MIU805005](#)
 Interval (hrs) - 500.

DIESEL PARTICULATE FILTER (DPF) (COMPONENT OF EXHAUST FILTER) - [MIU804396](#)
 Interval (hrs) - As Required.

PRIMARY FUEL FILTER ELEMENT - [MIU802421](#)
 Interval (hrs) - 500.

OILS AND CAPACITIES INFORMATION

333G Compact Track Loader (PIN:1T0333G___E314413-387237)

Part Description	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil ²	12.6 L(3.3 gal)	500
John Deere Hydrau™ Hydraulic and Hydrostatic Oil ²	33.1 L(8.7 gal)	1000
API GL-5 Final Drive Planetary Oil ² (per side) (331G and 333G only)	0.85 L(0.224 gal)	1000
John Deere Cool-Gard™ II Pre-Mix	14.9 L(3.9 gal)	6000
Fluid Analysis Test Kits ³		
Diesel Engine Oil	1	500
Hydraulic Oil	1	500
Engine Coolant	1	500
² See operator's manual for recommended oil type and oil viscosities based on operating temperatures. ³ Based on fluid analysis results, intervals may need to be adjusted for operating conditions. See an authorized John Deere dealer.		

Plus-50 is a trademark of Deere & Company
 Hydrau is a trademark of Deere & Company
 Cool-Gard is a trademark of Deere & Company

Service Intervals

As Required	
<input type="checkbox"/> Check and clean cooling package	<input type="checkbox"/> Replace cab recirculation air filter (if equipped)
<input type="checkbox"/> Check tire pressure (330G and 332G only)	<input type="checkbox"/> Check wheel lug nut torque (330G and 332G only)
<input type="checkbox"/> Replace primary engine air filter element	<input type="checkbox"/> Check accessory drive belt
<input type="checkbox"/> Drain water and sediment from fuel tank	<input type="checkbox"/> Service exhaust filter
<input type="checkbox"/> Check and drain primary fuel filter and water separator	<input type="checkbox"/> Check and adjust steering mistracking
<input type="checkbox"/> Replace secondary engine air filter element (every third primary element replacement or as needed)	<input type="checkbox"/> Clean and tighten battery terminals
<input type="checkbox"/> Replace cab fresh air filter (if equipped)	
Every 10 Hours or Daily	
<input type="checkbox"/> Check engine oil level	<input type="checkbox"/> Check hydraulic oil level
<input type="checkbox"/> Check coolant level	<input type="checkbox"/> Lubricate boom linkage, cylinder pivot points, and Quik-Tatch™ linkage
Initial Service—50 Hours	
<input type="checkbox"/> Drain and refill hydrostatic planetary gear case oil (331G and 333G only)	
Every 50 Hours	
<input type="checkbox"/> Check and clean dust unloader valve	<input type="checkbox"/> Check track tension (331G and 333G only)
Every 250 Hours	
<input type="checkbox"/> Take engine oil sample	
Every 500 Hours	
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Check chain case oil level (330G and 332G only)
<input type="checkbox"/> Replace primary fuel filter and water separator	<input type="checkbox"/> Drain and refill hydrostatic planetary gear case oil (331G and 333G only)
<input type="checkbox"/> Replace final fuel filter	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Replace hydraulic oil reservoir breather	<input type="checkbox"/> Take engine coolant sample
Every 1000 Hours	
<input type="checkbox"/> Check coolant condition	<input type="checkbox"/> Drain and refill hydraulic oil and replace filter elements
<input type="checkbox"/> Replace fuel tank breather	<input type="checkbox"/> Drain and refill chain case oil (330G and 332G only)
<input type="checkbox"/> Replace auxiliary fuel tank breather	
Every 1500 Hours	
<input type="checkbox"/> Check and adjust engine valve lash	
Every 6000 Hours	
<input type="checkbox"/> Drain and refill cooling system	