

# REPLACEMENT PARTS GUIDE

## 615P BELT PICKUP

### AUGER FINGERS



**AUGER FINGER, STEEL**  
[H169914](#)



**AUGER FINGER KIT, COMPOSITE**  
[AH214869](#) (Set of 10 Elements)



**AUGER FINGER KIT, STEEL**  
[AH214868](#) (Set of 10 Elements)



**FINGER BEARING ASSEMBLY**  
[AH171602](#)



**FINGER CAP, STEEL**  
[H168206](#)



**FINGER CAP, COMPOSITE**  
[H202409](#)



**FINGER KIT**  
[AZ60037](#)

### AUGER DRIVE COMPONENTS




**SLIP CLUTCH**  
[AH226112](#) (- 740100)




[AXE15323](#) (740101 -)



 
### BELTING, FRAME AND DIVIDERS



 **BELT, PICKING SEGMENTED CLEAT**  
[HXE108256](#)



 **BELT, TRANSFER SEGMENTED CLEAT**  
[HXE108260](#)



**BELT KIT WITH PLASTIC FINGERS**  
[AXE60849](#)



**PLASTIC BELT PICKUP FINGER**  
[H86248](#)



**PLATFORM SHEET, PICKING BELT**  
[H213268](#)



**PLATFORM SHEET, TRANSFER BELT**  
[H216899](#)



**ADJUSTABLE WINDROW RAKE FINGER**  
[AH231461](#)



**CROP DEFLECTOR ATTACHMENT**  
[BXE11472](#)



**ABSORBER**  
[AXE39011](#)