

REPLACEMENT PARTS GUIDE

2038R Tractor (GH100008-) (North America Edition)

ENGINE



ENGINE OIL

[TY26668](#) (10W-30 PLUS-50™ II) (5.4 L (1.4 gal))

Change Every 200 Hrs or Annually, whichever comes first.



FUEL FILTER

[MIU800645](#) (PRIMARY)

[MIU803127](#) (SECONDARY)

Change after every 400 Hrs/Annually.



AIR FILTER

[M131802](#) (PRIMARY)

[M131803](#) (SECONDARY)

Change every 400 hrs. or annually.



JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE

[TY6341](#)

GREASE GUN

[TY26183](#)

Change As Required.



OIL FILTER

[M806419](#)

Change Every 200 Hrs or Annually, whichever comes first.



FUEL ELEMENT

[AM881823](#) (FUEL & WATER SEPARATOR)

[M811032](#) (FILTER ELEMENT)

Change after every 400 Hrs. or annually.



DIESEL PARTICULATE FILTER

[MIU803276](#)



HOME MAINTENANCE KIT

[TA25767](#)



ELECTRICAL



KEY

[LVU33004](#)



ROTARY SWITCH

[LVA21501](#)



BATTERY

[TY26498](#) (12 V)



LED WORK LIGHT, OOS

[AM143579](#) (12 V)



HEADLIGHT

[R136239](#) (12 V 60/55 W)

FUEL & AIR



FILLER CAP

[AL213202](#)

AXLE



TIE ROD

[LVA15994](#) (ASSEMBLY)

[LVA15996](#) (RH)

[LVA15995](#) (LH)



FRONT AXLE OIL

[TY22000](#) (John Deere Low Viscosity Hy-Gard™)

Change every 50/400/600 Hrs.

TRANSMISSION/ HYDRAULIC



TRANSMISSION/HYDRAULIC OIL

[TY22000](#) (47.3 L (12.5 gal.))

Change after every 400 Hrs. or annually.



OIL FILTER

[LVA14703](#) (TRANSMISSION)

[LVA16054](#) (HYDRAULIC)

Replace initially after 50 hours, then every 200 hours.