

REPLACEMENT PARTS GUIDE

5 Series Tractors - 5204 and 5303 Tractors (Mexico Edition)

ENGINE



FINAL FUEL FILTER

[RE60021](#) (5204)
[RE62418](#) (5303)

Replace after every 500 hours.



PRIMARY AIR FILTER

[RE68048](#)



SECONDARY AIR FILTER

[RE68049](#)

Replace after every 250 hours and annually.



OIL FILTER

[T19044](#)

Replace initially after 100 hours and every 250 hours and annually.



TRANSMISSION / HYDRAULIC



OIL FILTER

[RE45864](#)

Replace initially after 100 hours and after every 250 hours and every 500 hours and every 1200 hours.



JOHN DEERE
Genuine Parts and Service

CAPACITIES

5 Series Tractors - 5204 and 5303 Tractors (Mexico Edition)

CAPACITIES (Approximate):

Fuel Tank:

..... 60 L (15.85 gal)

Cooling System:

Cool-Gard™ II

..... 9.5 L (2.5 gal)

Transmission and Hydraulic System:

Hy-Gard™

..... 36 L (9.5 gal)

REPLACEMENT PARTS GUIDE

5 Series Tractors - 5204 and 5303 Tractors (Mexico Edition)

ENGINE



BRAKE DISK

[AL119874](#)

[L116596](#) (BRAKE ACTUATING DISK)



CLUTCH DISK

[RE242274](#) (PTO)

[SJ29351](#) (TRACTION)



BATTERY

[TY25803](#) (12 V)



ALTERNATOR

[RE234714](#) (5303) (-000415)



FAN BELT DRIVE

[R216949](#)



CAB



SEAT

[RE73192](#) (BOTTOM)

[RE212692](#) (BACK)

AXLE



TIE ROD

[RE192255](#) (ASSEMBLY)

[RE190506](#) (RH)

[RE190481](#) (LH)



JOHN DEERE

Genuine Parts and Service