

REPLACEMENT PARTS GUIDE

6R Final Tier 4 (FT4/Stage V) MY22 Series Row Tractors- 6R 140

HYDRAULICS



OIL FILTER

[AL232896](#) – 35 cm3 / 45 cm3
[AL232898](#) – 60 cm3

Replace after first 100 hours then after first 750 hours and every 750 hours thereafter. Change Transmission Oil Filter as well.

ENGINE

OIL FILTER

[RE504836](#)



Replace after first 100 hours, then after every 500 hours or annually, whichever occurs first.

The extended 500 hour interval is only allowed if using Plus-50™ II oil, JD OEM Oil Filter and diesel fuel with sulfur content less than 15mg/kg (15 ppm).

Change Oil and Filter after every 250 hours, if conditions are not met.



OPEN CRANKCASE VENTILATION (OCV) FILTER

[DZ105100](#) - (6068 IT4/FT4 ENGINE)

Replace after every 1500 hours or 2 years, whichever occurs first.



PRIMARY FUEL FILTER

[DZ115389](#)



SECONDARY FUEL FILTER

[DZ115390](#)

Replace after every 500 hours.

FRONT PTO



OIL FILTER

[DE30500](#)

Replace after every 500 hours.

ENGINE

PRIMARY AIR FILTER

[AL215055](#)



Replace after every 1500 hours or 2 years, whichever occurs first.

SECONDARY AIR FILTER

[AL215054](#)



Replace at every fourth change of Primary Air Filter, or after 4500 hours or 5 years, whichever occurs first.



CAB

FRESH AIR FILTER

[AL220527](#)

Replace after every 1500 hours, or 2 years, or as required, or with Engine Primary Air Filter, whichever occurs first.

(ACTIVATED CARBON KIT) - [AL208648](#)

Never clean. Replace after every 500 hours or 1 year or with Engine Primary Air Filter, whichever occurs first.

RECIRCULATION AIR FILTER (QTY 2) W/ AC

[L214634](#)

RECIRCULATION AIR FILTER (QTY 2) W/O AC

[L205372](#)

Replace after every 1500 hours, or 2 years, or as required, or with Engine Primary Air Filter, whichever occurs first.

(ACTIVATED CARBON KIT)

[AL208648](#)

Never clean. Replace after every 500 hours or 1 year or with Engine Primary Air Filter, whichever occurs first.

TRANSMISSION

OIL FILTER

[AL206482](#) - (AutoPowr™ / IVT™)

[AL221066](#) - (Direct Drive™)

[AL221066](#) - (PowrQuad™)



Replace after first 100 hours, then after first 750 hours and every 750 hours thereafter. Change Hydraulic Oil Filter as well.

CAPACITIES

6R Final Tier 4 (FT4/Stage V) MY22 Series Row Tractors- 6R 140

CAPACITIES (Approximate):

Fuel Tank:

Optional

6R 140 199 L (52.6 gal)

Optional

6R 140 225 L (59.4 gal)

Cooling System:

Cool-Gard™ II

Engine cooling and cab heating 22 L (5.8 gal)

Engine:

Plus-50™ II

Crankcase 16 L (4.2 gal)

Transmission/Hydraulics:

Hy-Gard™

AutoPowr™ Transmission

6R 140 60 L (15.9 gal)

AutoQuad™ PLUS Transmission

6R 140 53 L (14.0 gal)

CommandQuad™ PLUS Transmission

6R 140 53 L (14.0 gal)

Extra with creeper

6R 140 1 L (0.3 gal)

Extra with additional oil reservoir

6R 140 17 L (4.5 gal)

Front -Wheel Drive:

Hy-Gard™

Axle housing (suspended axle)..... 6.0 L (1.6 gal)

Final drives (without brake)..... 0.8 L (0.2 gal)

Final drives (with brake)..... 1.5 L (0.4 gal)

Air-conditioning System:

R 134a Refrigerant..... 1225 - 1275 g

(2.70 - 2.81 lb)

REPLACEMENT PARTS GUIDE

6R Final Tier 4 (FT4/Stage V) MY22 Series Row Tractors- 6R 140

ENGINE



ALTERNATOR

[AL232854](#) - 14V / 250A
[AL232853](#) - 14V / 210A



BELTS BETWEEN ENGINE AND WATER PUMP, AIR COMPRESSOR, AC COMPRESSOR

[L224901](#) - DRIVE BELT, W/ AIR CONDITIONING SYSTEM, W/O AIR TRAILER BRAKE SYSTEM
[L223682](#) - DRIVE BELT, W/ AIR CONDITIONING SYSTEM, W/ AIR TRAILER BRAKE SYSTEM



BATTERY

[AL203840](#) - WET CHARGE BATTERY, 12V, 174AH
[AL203839](#) - WET CHARGE BATTERY, 12V, 154AH, 1150A

AXLE



TIE ROD ENDS

[AL75597](#) - 2WD FRONT AXLE
[AR63590](#) - 2WD FRONT AXLE
[AL231877](#) - MFWD AXLE
[AL222371](#) - MFWD AXLE



CAB

SEAT

[AL224108](#) - BACK, INSTRUCTIONAL SEAT
[AL224109](#) - BOTTOM, INSTRUCTIONAL SEAT
[AL224593](#) - BACK, AIR SUSPENDED, MSG97EL/741
[AL230558](#) - BOTTOM, LEATHER SEAT, AIR SUSPENDED, MSG97EL/741
[AL230557](#) - BACK, LEATHER SEAT, AIR SUSPENDED, MSG97EL/741
[AL224594](#) - BOTTOM, AIR SUSPENDED, MSG97EL/741



ENGINE

BEAKE DISK

[RE321696](#) - REVERSER BRAKE, POWRQUAD™ OR COMMANDQUAD™
[AL171955](#) - REAR AXLE, HEAVY DUTY VERSION
[AL160176](#) - MFWD AXLE
[AL214835](#) - FRONT PTO



CLUTCH DISK

[RE326609](#) - C4 CLUTCH, POWRQUAD™
[R216294](#) - CLUTCH PLATE
[RE321692](#) - FORWARD CLUTCH, POWRQUAD™
[R96805](#) - CLUTCH PLATE
[R96806](#) - CLUTCH PLATE



JOHN DEERE

Genuine Parts and Service

CLICK PART NUMBER TO BUY

*See operator's manual for additional details.