

REPLACEMENT PARTS GUIDE

4052R Compact Utility Tractor

ELECTRICAL

KEY

[RE183935](#)



ROTARY SWITCH

[LVA21501](#)



BATTERY

[TY26442B](#) (12 V)



LED WORK LIGHT

[AM143579](#) (OOS) (12 V)



HEADLIGHT

[R136239](#) (12 V 60/55 W)



FUEL TANK FILLER CAP

FILLER CAP

[AL213202](#)



CAB (IF EQUIPPED)

AIR FILTER

[MIU10010](#) (FRESH)

[MIU10011](#) (RECIRCULATION)

Clean or replace after every 50 hours and as required



TRANSMISSION/ HYDRAULIC

TRANSMISSION/HYDRAULIC OIL

[TY22000](#) (47.3 L (12.5 gal.))

Change after every 400 Hrs. or annually.



OIL FILTER

[RE45864](#) (TRANSMISSION)

[LVA10419](#) (HYDRAULIC)

Change after every 400 Hrs. or annually.



V - BELT

[TR131486](#) (LGTH = 1112 mm,
WIDTH = 13.4 mm, TK = 9.6 mm)



ENGINE

ENGINE OIL

[TY26668](#) (10W-30 PLUS-50™ II) (5.4 L (1.4 gal.))
Change Every 200 Hrs or Annually, whichever comes first.



SPIN-ON FUEL FILTER

[MIU803127](#)

Change after every 400 Hrs/Annually.



AIR FILTER

[RE68048](#) (PRIMARY)

[RE68049](#) (SECONDARY)

Change every 600 hrs. or annually.



JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE

[TY6341](#)

GREASE GUN

[TY26183](#)

Change As Required.



OIL FILTER

[M806419](#)

Change Every 200 Hrs or Annually, whichever comes first.



FUEL-WATER SEPARATOR

[MIU803221](#) (SEPARATOR)

[MIU802421](#) (FILTER ELEMENT)

Change after every 400 Hrs. or annually.



HOME MAINTENANCE KIT

[TA25765](#)



DIESEL PARTICULATE FILTER

[MIU802216](#)



AXLE

TIE ROD

[LVA14951](#) (ASSEMBLY)

[LVA14960](#) (LH)

[LVA14959](#) (RH)



FRONT AXLE OIL

[TY22000](#) (John Deere Low Viscosity Hy-Gard™)

Change every 50/400/600 Hrs.

