


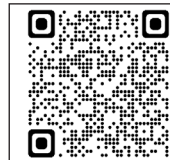

REPLACEMENT PARTS GUIDE


260P Articulated Dump Truck (PIN: 1DW260PA__F_00001-)


FAST FILL FUEL BREATHER (IF EQUIPPED)
[T225008](#)
 Interval (hrs) - 500.




FINAL FUEL FILTER ELEMENT
[DZ112918](#)
 Interval (hrs) - 500.




PRIMARY FUEL FILTER ELEMENT
[RE539465](#)
 Interval (hrs) - 500.



ENGINE OIL FILTER²
[DZ118283](#)
 Interval (hrs) - 5000.



HYDRAULIC SYSTEM RETURN FILTER ELEMENT
[AT335977](#)
 Interval (hrs) - 4000.




ENGINE AIR FILTER ELEMENT—SECONDARY
[T340572](#)
 Interval (hrs) - 6000.



ENGINE AIR FILTER ELEMENT—PRIMARY
[T340571](#)
 Interval (hrs) - 2000.




AUXILIARY FUEL FILTER ELEMENT (IF EQUIPPED)
[AT365869](#)
 Interval (hrs) - 500.




FUEL TANK BREATHER
[H216169](#)
 Interval (hrs) - 2000.





HYDRAULIC RESERVOIR BREATHER
[AM39653](#)
 Interval (hrs) - 4000




DEF TANK BREATHER FILTER
[DZ114640](#)
 Interval (hrs) - 6000.




CAB RECIRCULATING AIR FILTER
[AT307501](#)
 Interval (hrs) - As Required.




CAB FRESH AIR FILTER
[AT191102](#)
 Interval (hrs) - As Required.




AIR CLEANER DUST UNLOADER VALVE
[T459385](#)
 Interval (hrs) - 2000.




AXLE OIL FILTER (IF EQUIPPED)²
[AT489922](#)
 Interval (hrs) - 1000.




EXHAUST FILTER(DPF)
[DZ100174](#)
 Interval (hrs) - As Required




STEERING CYLINDER SEALS
[AT469779](#)
 Interval (hrs) - As Required.



TRANSMISSION OIL FILTER³
[AT468647](#)
 Interval (hrs) - 2000.



ENGINE ROCKER ARM COVER GASKET
[R527884](#)
 Interval (hrs) - 2000.



DEF INLINE FILTER
[DZ124402](#)
 Interval (hrs) - 2000.



CLICK PART NUMBER TO BUY

*See operator's manual for additional details.

OILS AND CAPACITIES INFORMATION

260P Articulated Dump Truck (PIN: 1DW260PA__F_00001-)

Part Description	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil ^{2,4}	34.0 L (9.0 gal)	500
John Deere HD Synthetic Transmission Fluid ^{3,4}	60.0 L (15.9 gal)	2000
John Deere Hy-Gard™ Front Axle Oil ^{2,4}	37.0 L (9.8 gal)	2000
John Deere Hy-Gard™ Middle Axle Oil ^{2,4}	37.0 L (9.8 gal)	2000
John Deere Hy-Gard™ Rear Axle Oil ^{2,4}	37.0 L (9.8 gal)	2000
John Deere Hydrau™ Hydraulic System Oil ⁴	113.5 L (30.0 gal)	4000
John Deere COOL-GARD™ II Pre-Mix	48.0 L (12.7 gal)	6000

OILS AND CAPACITIES INFORMATION

260P Articulated Dump Truck (PIN: 1DW260PA__F_00001-)

Fluid Analysis Kits ⁴		
Part Description	Qty or Capacity	Change Interval In Hours
Diesel Engine Oil Kit	1	250
Transmission Oil Kit	1	500
Axle Oil Kit	3	500
Hydraulic Oil Kit	1	500
Diesel Fuel Kit	1	500
Engine Coolant Kit	1	500

²Interval not to exceed 12 months.

³Interval not to exceed 24 months.

⁴See operator's manual for recommended oil type and oil viscosities based on operating temperatures.

⁵Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult an authorized John Deere dealer.

Plus-50 is a trademark of Deere & Company

Hy-Gard is a trademark of Deere & Company

Hydrau is a trademark of Deere & Company

Cool-Gard is a trademark of Deere & Company

Service Intervals

Service Intervals—D Engine	
As Required	
<input type="checkbox"/> Clean and tighten battery terminals	<input type="checkbox"/> Inspect tires and check pressure
<input type="checkbox"/> Inspect serpentine belt	<input type="checkbox"/> Check wheel bolt torque
<input type="checkbox"/> Check engine air cleaner elements	<input type="checkbox"/> Check service brake disc wear
<input type="checkbox"/> Check windshield washer fluid level	<input type="checkbox"/> Inspect steering cylinder seals
<input type="checkbox"/> Drain primary and final fuel filter with water separators	<input type="checkbox"/> Check cab air filters
<input type="checkbox"/> Drain auxiliary fuel filter with water separator (if equipped)	<input type="checkbox"/> Check rear camera and radar object detection system (RODS) (if equipped)
<input type="checkbox"/> Clean cooler cores	
Every 10 Hours or Daily	
<input type="checkbox"/> Clean dust unloader valve	<input type="checkbox"/> Check hydraulic system oil level
<input type="checkbox"/> Check engine oil level	<input type="checkbox"/> Check transmission oil level
<input type="checkbox"/> Check engine coolant level	
Every 50 Hours or Weekly	
<input type="checkbox"/> Lubricate articulation joint, oscillation joint, and through-drive bearing	<input type="checkbox"/> Lubricate greaseable steering cylinder pins
Every 250 Hours	
<input type="checkbox"/> Take engine oil sample	
Initial Service - 500 Hours ¹	
<input type="checkbox"/> Replace axle oil filters (if equipped)	<input type="checkbox"/> Rerun transmission clutch calibration (cab monitor)
<input type="checkbox"/> Drain and refill axle oil ²	
Every 500 Hours	
<input type="checkbox"/> Check hybrid battery electrolyte level (if equipped)	<input type="checkbox"/> Check air intake hoses and charge air cooler tube couplings
<input type="checkbox"/> Take diesel fuel sample	<input type="checkbox"/> Replace primary fuel filter with water separator
<input type="checkbox"/> Take axle oil sample	<input type="checkbox"/> Replace auxiliary fuel filter with water separator (if equipped)
<input type="checkbox"/> Take transmission oil sample	<input type="checkbox"/> Replace final fuel filter
<input type="checkbox"/> Take coolant sample	<input type="checkbox"/> Replace fuel tank breather (if equipped) with fast fill
<input type="checkbox"/> Take hydraulic oil sample	<input type="checkbox"/> Check park brake pad wear and lubricate linkage
<input type="checkbox"/> Drain and refill engine oil and replace filter ²	
Every 1000 Hours	
<input type="checkbox"/> Replace axle oil filters (if equipped) ²	<input type="checkbox"/> Check axle oil levels
<input type="checkbox"/> Check coolant condition	<input type="checkbox"/> Check and adjust dump body shock pads
Every 2000 Hours	
<input type="checkbox"/> Replace primary air cleaner element	<input type="checkbox"/> Clean and inspect axle breathers
<input type="checkbox"/> Check and adjust engine valve lash	<input type="checkbox"/> Drain and refill transmission oil ³
<input type="checkbox"/> Replace fuel tank breather filter	<input type="checkbox"/> Replace transmission oil filters ³
<input type="checkbox"/> Drain and refill axle oil ²	<input type="checkbox"/> Run transmission clutch calibration (cab monitor)
<input type="checkbox"/> Clean axle pump suction screen (if equipped)	

Service Intervals

Service Intervals—D Engine	
<input type="checkbox"/> Clean hydraulic system fill strainer	<input type="checkbox"/> Drain and refill hydraulic system oil
<input type="checkbox"/> Replace hydraulic system return filter	<input type="checkbox"/> Replace hydraulic reservoir breather
<input type="checkbox"/> Clean hydraulic pump case in-line screen	
Every 6000 Hours	
<input type="checkbox"/> Replace secondary air cleaner element	<input type="checkbox"/> Inspect driveline torsional coupler
<input type="checkbox"/> Drain and refill engine cooling system	