

# REPLACEMENT PARTS GUIDE

## 5 Series Tractors - 5303, 5403 and 5503 (Stage II Engine) (Turkey Edition)

### ENGINE



#### FINAL FUEL FILTER [RE60021](#)

Replace after every 500 hours.

1

2

3



#### PRIMARY AIR FILTER [RE68048](#) (5503)

[AT171853](#) (5403, 5503)

#### SECONDARY AIR FILTER

[RE68049](#) (5503)

[AT171854](#) (5403, 5503)

Replace after every 250 hours and annually.

#### OIL FILTER

[RE507204](#) (For India)

[T19044](#) (For Export)

[RE519626](#) (5503)

Replace initially after 100 hours and every 250 hours and annually.



### TRANSMISSION / HYDRAULIC



#### OIL FILTER

[RE45864](#)

Replace initially after 100 hours and after every 250 hours and every 1000 hours and every 1200 hours.

4

# CAPACITIES

## 5 Series Tractors - 5303, 5403 and 5503 (Stage II Engine) (Turkey Edition)

### CAPACITIES (Approximate):

#### Fuel Tank:

..... 70 L (18.5 gal)

#### Cooling System:

##### Cool-Gard™ II

..... 9.5 L (2.5 gal)

### Transmission and Hydraulic System:


#### Hy-Gard™


..... 38 L (10 gal)  
(4WD) ..... 39 L (10.3 gal)


# REPLACEMENT PARTS GUIDE


## 5 Series Tractors - 5303, 5403 and 5503 (Stage II Engine) (Turkey Edition)


**ENGINE**

 **BRAKE DISK**  
[RE45938](#) (MFWD)  
[AL162808](#)  
[L77358](#) (BRAKE ACTUATING DISK)

 **BATTERY**  
[TY25803](#) (12 V)


 **CLUTCH DISK**  
[RE242274](#) (PTO)  
[SJ29351](#) (TRACTION)

 **ALTERNATOR**  
[RE234714](#) (43 A)  
 (5303(000014-),5403(000832-)  
 5503(000001-))


 **FAN BELT DRIVE**  
[R8715](#) (000001-)



**CAB**

 **SEAT**  
[RE73957](#) (BACK)  
[RE73956](#) (BOTTOM)

**AXLE**

 **TIE ROD**  
[RE204877](#) ( ASSEMBLY) (MFWD)  
[RE204878](#) (LH) (RH)  
 (TIE ROD ENDS) (OUTER)  
[RE204879](#) (LH) (RH)  
 (TIE ROD ENDS) (INNER)  
[RE217616](#) (ASSEMBLY)  
[RE217819](#) (BALL JOINT)