

FILTER OVERVIEW WITH SERVICE INTERVALS AND CAPACITIES

5000 Narrow Series - 5400N and 5500N Tractors (North American Edition)

HYDRAULIC OIL FILTER

[RE45864](#) (all)


Replace after initial 100 hours, then every 250 hours. Change after 1200 hours of operation.



CAB AIR FILTER

[AL225554](#)

Always replace cab filter when primary engine air filter is replaced.

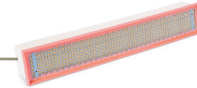


ENGINE PRIMARY AIR FILTER

[RE45827](#) (all)

SECONDARY AIR FILTER

[RE45828](#) (all)

Service after every 250 hours or annually whichever occurs first. Clean as required.

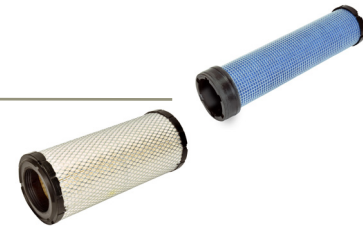

ENGINE OIL FILTER

[T19044](#) (all)

Replace after initial 100 hours, then every 250 hours or annually whichever ever comes first.



ENGINE PRIMARY FUEL FILTER

[RE62418](#)

FINAL FUEL FILTER

[RE62419](#)

Change after every 500 hours. Change as required.



http://www.deere.com/en_US/parts/service/support/filter/overviews

CAPACITIES

5000 Narrow Series - 5400N and 5500N Tractors (North American Edition)

CAPACITIES (Approximate):

Fuel Tank:

.....60 L (16 gal)

Cooling System:

Cool-Gard™ II

.....9.7 L (2.13 gal)

Crankcase with Filter:

Plus-50 II™

.....8.5 L (1.86 gal)

Transmission and Hydraulic System:

Hy-Gard™

.....41.8 L (11 gal)

Mechanical Front Wheel Drive (MFWD) Axle:

Hy-Gard™

Axle Housing5 L (1.09 gal)

Wheel Hub (Each)0.5 L (0.1 gal)

[Return to Filter Overview](#)