

REPLACEMENT PARTS GUIDE

6E Series -6125 (S.N. 500001 -) Tractors (South America Edition)



HYDRAULIC & TRANSMISSION



OIL FILTER
[AL221066](#)
HYDRAULIC OIL FILTER
[AL203061](#)

Replace initially after 100 hours and after every 750 hours.

ENGINE



PRIMARY AIR FILTER
[AL172780](#)



SECONDARY AIR FILTER
[AL150288](#)
Replace every 250 hours and annually.



PRIMARY FUEL FILTER
[RE546336](#)



FINAL FUEL FILTER
[RE544394](#)
Replace every 250 hours and annually.



OIL FILTER
[RE504836](#)
Replace initially after 100 hours and every 375 hours, every 500 hours and annually.



JOHN DEERE
Genuine Parts and Service

CAPACITIES

6E Series -6125 (S.N. 500001 -) Tractors (South America Edition)

CAPACITIES (Approximate):

Fuel Tank:

.....240L (63.4 gal)

Cooling System:

Cool-Gard™ II

.....29 L (7.6 gal)

Transmission and Hydraulic System:

Hy-Gard™

.....65.4 L (17.3 gal)

Front Axle:

Hy-Gard™

Front Axle Differential8.2 L (2.1 gal)

Final Front Axle Reducers (Each).....0.75 L (0.2 gal)

REPLACEMENT PARTS GUIDE

6E Series -6125 (S.N. 500001 -) Tractors (South America Edition)

ENGINE



BRAKE DISK
[AL171954](#)



FAN BELT DRIVE
[CQ51921](#)



BATTERY
[SJ10989](#)



ALTERNATOR
[AL219434](#) (W / PULLEY)
[AL166645](#) (14V / 90A)



CAB



SEAT
[MN10233](#)

AXLE



TIE ROD
[AL151283](#) (ELECTRICAL HAND
THROTTLE)
[DQ67133](#) (STEERING CYLINDER)
[DQ67134](#) (STEERING CYLINDER)



JOHN DEERE
Genuine Parts and Service