

# REPLACEMENT PARTS GUIDE

## 755K (PIN: 1T0755KX\_\_F339207—)



### DIESEL EXHAUST FLUID (DEF) TANK BREATHER

[H216169](#)

Interval (hrs) - 4000.

### Cab Fresh Air Filter

[AT191102](#)

Interval (hrs) - As required.

### HYDRAULIC FAN SYSTEM FILTER

[T366738](#)

Interval (hrs) - 2000.

### HYDRAULIC TANK BREATHER

[AM39653](#)

Interval (hrs) - 2000.

### HYDRAULIC OIL FILTER

[RE174130](#)

Interval (hrs) - 2000.

### BUCKET LINK JOINTS - [AT330664](#)

### BOOM-TO-BUCKET JOINTS - [AT341091](#)

Interval (hrs) - 2000.

### HYDROSTATIC TRANSMISSION OIL FILTER

[AT318160](#)

Interval (hrs) - 2000.

### DIESEL EXHAUST FLUID (DEF) DOSING UNIT

[RE554498](#)

Interval (hrs) - 2000.

### FUEL TANK BREATHER

[T231314](#)

Interval (hrs) - 2000.

### ENGINE ROCKER ARM COVER GASKET

[R532242](#)

Interval (hrs) - 2000.

### CAB RECIRCULATING AIR FILTER

[AT315957](#)

Interval (hrs) - As required.

### DIESEL EXHAUST FLUID (DEF) HEADER SUCTION

[AT484544](#)

Interval (hrs) - 4000.

### ENGINE AIR FILTER ELEMENT—PRIMARY

[AT223226](#)

Interval (hrs) - As required.

### ENGINE AIR FILTER ELEMENT—SECONDARY

[AT175224](#)

Interval (hrs) - As required.

### OPEN CRANKCASE VENTILATION (OCV) FILTER - [DZ105100](#)

Interval (hrs) - 2000.

### PRIMARY FUEL FILTER FINAL FUEL FILTER

[RE556406](#)

Interval (hrs) - 500.

### AUXILIARY FUEL FILTER (IF EQUIPPED)

[AT365870](#)

Interval (hrs) - 500.

### ENGINE OIL FILTER

[RE539279](#)

Interval (hrs) - 500.

### DIESEL PARTICULATE FILTER (COMPONENT OF EXHAUST FILTER) - [DZ100484](#)

Interval (hrs) - As required.

### SERPENTINE BELT

[RE548027](#)

Interval (hrs) - As required.










CLICK PART NUMBER TO BUY

\*See operator's manual for additional details.

# REPLACEMENT PARTS GUIDE

755K (PIN: 1T0755KX\_ \_F339207— )

Part Description	Part Number	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil <sup>1</sup> 	<a href="#">TY26669</a>	24.6 L(6.5 gal)	500
John Deere Hy-Gard™ Inner Final Drive Oil (each side) <sup>1</sup> 	<a href="#">TY6354</a>	9.5 L (2.5 gal)	500
"John Deere Hy-Gard™ Outer Final Drive Oil (each side)" <sup>1</sup> 	<a href="#">TY6354</a>	15.9 L (4.2 gal)	500
API GL-5 Track Frame Pivot Shaft Oil <sup>1</sup> 	<a href="#">TY6354</a>	1.7 L(1.8 qt)	1000
John Deere Hydrau™ Hydrostatic Transmission Oil <sup>1</sup> 	<a href="#">TY27367</a>	66.6 L (17.6 gal)	2000
John Deere Hydrau™ Hydraulic System Oil <sup>1</sup> 	<a href="#">TY27367</a>	103.0 L (27.2 gal)	2000
John Deere COOL-GARD™II Pre-Mix 	<a href="#">TY26575</a>	32.0 L (8.5 gal)	6000
<b>Fluid Analysis Kits*</b>			
Diesel Engine Oil	<a href="#">AT346594</a>	1	500
Hydrostatic Transmission Oil	<a href="#">AT346594</a>	1	500
Inner and Outer Final Drive Oil	<a href="#">AT346594</a>	4	500
Hydraulic System Oil	<a href="#">AT346594</a>	1	500
Diesel Fuel	<a href="#">AT180344</a>	1	500
Engine Coolant	<a href="#">TY26873</a>	1	500

<sup>1</sup>See operator's manual for recommended oil type and oil viscosities based on operating temperatures.

<sup>4</sup>Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult an authorized John Deere dealer.

Plus-50 is a trademark of Deere & Company

Hy-Gard is a trademark of Deere & Company

Hydrau is a trademark of Deere & Company

COOL-GARD is a trademark of Deere & Company



## Service Intervals

755K (PIN: 1T0755KX\_ \_F339207— )

As Required	
<input type="checkbox"/> Inspect and clean cooling package	<input type="checkbox"/> Check and fill windshield washer fluid
<input type="checkbox"/> Inspect or replace belt and check automatic belt tensioner	<input type="checkbox"/> Check and adjust track sag
<input type="checkbox"/> Check and drain primary fuel filter and water separator	<input type="checkbox"/> Service exhaust filter
<input type="checkbox"/> Check and drain auxiliary fuel filter and water separator (if equipped)	<input type="checkbox"/> Replace primary and secondary engine air filter elements
<input type="checkbox"/> Check and replace cab fresh air and recirculation filter elements	<input type="checkbox"/> Check air cleaner dust unloader valve
<input type="checkbox"/> Clean and tighten battery terminals	
Every 10 Hours or Daily	
<input type="checkbox"/> Check coolant level at surge tank	<input type="checkbox"/> Check hydrostatic transmission oil level
<input type="checkbox"/> Check engine oil level	<input type="checkbox"/> Inspect outer pin seals
<input type="checkbox"/> Check hydraulic system oil level	
Every 50 Hours	
<input type="checkbox"/> Lubricate right and left crossbar pivots	<input type="checkbox"/> Lubricate loader linkage and cylinder pivots
<input type="checkbox"/> Lubricate rear ripper (if equipped)	<input type="checkbox"/> Lubricate multipurpose bucket (if equipped)
Every 250 Hours	
<input type="checkbox"/> Check inner and outer final drive oil level	<input type="checkbox"/> Take engine oil sample
Every 500 Hours	
<input type="checkbox"/> Replace primary and final fuel filters	<input type="checkbox"/> Take hydraulic system oil sample
<input type="checkbox"/> Replace auxiliary fuel filter (if equipped)	<input type="checkbox"/> Take hydrostatic transmission oil sample
<input type="checkbox"/> Drain water and sediment from fuel tank	<input type="checkbox"/> Take inner and outer final drive oil sample
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Take engine coolant sample
<input type="checkbox"/> Check hybrid battery electrolyte level (if equipped)	<input type="checkbox"/> Take diesel fuel sample
Every 1000 Hours	
<input type="checkbox"/> Replace cab fresh air and recirculation filter elements	<input type="checkbox"/> Check air intake hose and connections
<input type="checkbox"/> Check coolant condition	<input type="checkbox"/> Check and refill track frame pivot shaft bushing oil
<input type="checkbox"/> Drain and refill inner and outer final drive oil	
Every 2000 Hours	
<input type="checkbox"/> Drain and refill hydraulic system oil and replace filter	<input type="checkbox"/> Replace fuel tank breather
<input type="checkbox"/> Replace hydraulic tank breather	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) dosing unit filter
<input type="checkbox"/> Replace hydraulic fan system filter	<input type="checkbox"/> Replace open crankcase ventilation (OCV) filter
<input type="checkbox"/> Drain and refill hydrostatic transmission oil and replace oil filter	<input type="checkbox"/> Check and adjust engine valve lash
<input type="checkbox"/> Replace hydrostatic tank breather	<input type="checkbox"/> Replace outer pin seals
Every 4000 Hours	
<input type="checkbox"/> Replace diesel exhaust fluid (DEF) tank breather filter	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) baffle
<input type="checkbox"/> Replace diesel exhaust fluid (DEF) header suction filter	<input type="checkbox"/> Clean diesel exhaust fluid (DEF) tank
Every 6000 Hours	
<input type="checkbox"/> Drain and refill engine cooling system	