

# FILTER OVERVIEW WITH SERVICE INTERVALS AND CAPACITIES

## 6M Final Tier 4 (FT4) Series Utility Tractors – 6110M, 6120M and 6130M

### ENGINE

#### OIL FILTER

[RE504836](#)

Replace after every 500 hours or annually.

The extended 500 hour interval is only allowed if using Plus-50™ II oil, JD OEM Oil Filter and diesel fuel with sulfur content less than 15mg/kg (15 ppm).

Change Oil and Filter after every 250 hours, if conditions are not met.

(Click here for [capacity](#))

### ENGINE

#### PRIMARY FUEL FILTER

[RE560682](#)

Replace after every 500 hours.

### ENGINE

#### SECONDARY FUEL FILTER

[RE551508](#)

Replace after every 500 hours.

### ENGINE

#### PRIMARY AIR FILTER

[AL215055](#)

Replace after every 1500 hours or 2 years, whichever occurs first.

### ENGINE

#### SECONDARY AIR FILTER

[AL215054](#)

Replace at every fourth change of Primary Air Filter, or after 4500 hours or 3 years, whichever occurs first.

### FRONT PTO

#### OIL FILTER

[DE30500](#)

Replace after every 500 hours.

### ENGINE

#### OPEN CRANKCASE VENTILATION (OCV) FILTER

[DZ105100](#)

Replace after every 1500 hours or 2 years, whichever occurs first.

### CAB

#### FRESH AIR FILTER

[AL177184](#)

Replace after every 1500 hours, or 2 years, or as required, or with Engine Primary Air Filter, whichever occurs first.

(Activated Carbon Kit) [AL158986](#)

Never clean. Replace after every 500 hours or 1 year or with Engine Primary Air Filter, whichever occurs first.

### CAB

#### RECIRCULATION AIR FILTER (QTY 2) W/ AC

[L214634](#)

#### RECIRCULATION AIR FILTER (QTY 2) W/O AC

[L152026](#)

Replace after every 1500 hours, or 2 years, or as required, or with Engine Primary Air Filter, whichever occurs first.

(Activated Carbon Kit)

[AL158986](#)

Never clean. Replace after every 500 hours or 1 year or with Engine Primary Air Filter, whichever occurs first.

### ENGINE

#### DIESEL PARTICULATE FILTER (DPF)

[RE566731](#)

Replace within 250 hours after exhaust filter and warning light indicators are alerted on display.

### TRANSMISSION

#### OIL FILTER

[AL221066](#)

Replace after first 100 hours, then after first 500 hours and every 500 hours thereafter. Change Hydraulic Oil Filter as well.

(Click here for [capacity](#))

### ENGINE

#### DIESEL EXHAUST FILTER

[RE554498](#)

Replace after every 4500 hours or 3 years, whichever occurs first.

### HYDRAULIC

#### OIL FILTER

[AL169573](#)

Replace after first 100 hours, then after first 500 hours and every 500 hours thereafter. Change Transmission Oil Filter as well.

(Click here for [capacity](#))



**JOHN DEERE**

Genuine Parts and Service

# CAPACITIES

## 6M Final Tier 4 (FT4) Series Utility Tractors – 6110M, 6120M and 6130M

### CAPACITIES (Approximate):

#### Fuel Tank:

..... 195 L (51.5 gal)

#### DEF Tank:

##### John Deere Diesel Exhaust Fluid™

..... 13 L (3.4 gal)

#### Cooling System:

##### Cool-Gard™ II

..... 22 L (5.8 gal)

#### Crankcase:

##### Plus-50™ II

..... 16 L (4.2 gal)

#### Transmission/Hydraulics:

##### Hy-Gard™

Transmission ..... 52 L (13.7 gal)

Extra with creeper ..... 1 L (0.3 gal)

Front PTO [If equipped] ..... 2.6 L (0.69 gal)

#### Front-wheel Drive:

##### Hy-Gard™

#### 2 Piece Front Axle type

##### 730, 733 and 735

Axle housing (with TLS™) ..... 6.4 L (1.69 gal)

Axle housing (without TLS™) ..... 5.4 L (1.43 gal)

Final drives, per side (without brake) ..... 0.8 L (0.21 gal)

Final drives, per side (with brake) ..... 1.4 L (0.37 gal)

#### 3 Piece Front Axle type

##### 735 (M40LD), 740 (M40), 745 (M40HD)

Axle housing ..... 7.2 L (1.9 gal)

Final drives, per side (without TLS™) ..... 0.8 L (0.21 gal)

Final drives, per side (with TLS™)(M40LD, M40 Axle) ..... 0.8 L (0.21 gal)

Final drives, per side (with TLS™)(M40HD Axle) ..... 0.7 L (0.19 gal)

Final drives, per side (with brake)(M40 Axle) ..... 1.4 L (0.37 gal)

Final drives, per side (with brake)(M40HD Axle) ..... 1.2 L (0.32 gal)

#### Air-conditioning system:

##### R134a refrigerant

..... 1225 - 1275 g (2.70 - 2.81 lb)

[Return to Filter Overview](#)

