

FILTER OVERVIEW WITH SERVICE INTERVALS AND CAPACITIES

9R Four Wheel Drive Final Tier 4 (FT4) Series Tractors - 9370R, 9420R, 9470R, 9520R, 9570R & 9620R

ENGINE

FUEL WATER SEPARATOR FILTER (If equipped) -
[N378886](#)
[AT365869](#) (Tier 2 And Tier 3 Engine) (Except 9620R)
 Change after every 500 hours.

ENGINE

CRANKCASE BREATHER
 FILTER ELEMENT (15L)
[RECCV5063400](#)

Replace after every 3000 hours.

CAB

RECIRCULATION FILTER
[RE291412](#)
[RE333569](#) (Carbon)

Replace after every 1000 hours or annually, whichever occurs first.

CAB

FRESH AIR FILTER
[RE284091](#)
[RE333567](#) (Carbon)

Replace after every 1000 hours or annually, whichever occurs first.

HYDRAULIC

AXLE OIL FILTER

(9370R, 9420R, 9470R) [RE577060](#) - Qty. 2 (9520R, 9570R, 9620R) [RE577060](#) - Qty. 3

Replace after every 1500 hours or annually, whichever occurs first.

(Click here for [capacity](#))

SCV

OIL FILTER - [RE269061](#)

ENGINE

FUEL TANK VENT FILTERS
[RE566125](#) (2)

Replace after every 1500 hours.

ENGINE

DEF TANK DOSING UNIT
[RE554498](#)

Replace after every 4500 hours or THREE years, whichever occurs first.

ENGINE

DEF TANK VENT FILTER [H216169](#)

Replace filter after first year of operation and every THREE years thereafter or 4500 hours, whichever occurs first.

HYDRAULIC

TRANSMISSION OIL FILTERS
[RE577060](#) & [RE577250](#)

Replace after every 1500 hours.

(Click here for [capacity](#))

ENGINE

OIL FILTER (9570R & 9620R)
[DZ121669](#) (SUB FOR [RE574468](#))

Replace after every 400 hours or as indicated, whichever occurs first.

(Click here for [capacity](#))

ENGINE

OIL FILTER (9420R, 9470R & 9520R)
[RE572785](#)

Replace after every 500 hours or as indicated, whichever occurs first.

(Click here for [capacity](#))

ENGINE

OIL FILTER (9370R) [RE509672](#)

Replace after every 500 hours or as indicated, whichever occurs first.

(Click here for [capacity](#))

ENGINE

(9370R, 9420R, 9470R & 9520R)
 PRIMARY & SECONDARY FUEL FILTER
[RE539465](#) & [RE533910](#)

Replace after every 500 hours, or as indicated, whichever occurs first.

ENGINE

(9570R & 9620R) PRIMARY & SECONDARY FUEL FILTER
[RE561968](#) & [RE574467](#)

Replace after every 400 hours or as indicated, whichever occurs first.

ENGINE

PRIMARY AIR FILTER
[R553819](#) - Qty. 2

Replace after every 1000 hours or annually, whichever occurs first.

ENGINE


SECONDARY AIR FILTER
[R344420](#) - Qty. 2

Replace after every 1000 hours or annually, whichever occurs first.

ENGINE

DEF TANK HEADER FILTER
[DZ111004](#) (25 MICRON)
[DZ104870](#) (40 MICRON)

Replace after every 4500 hours.

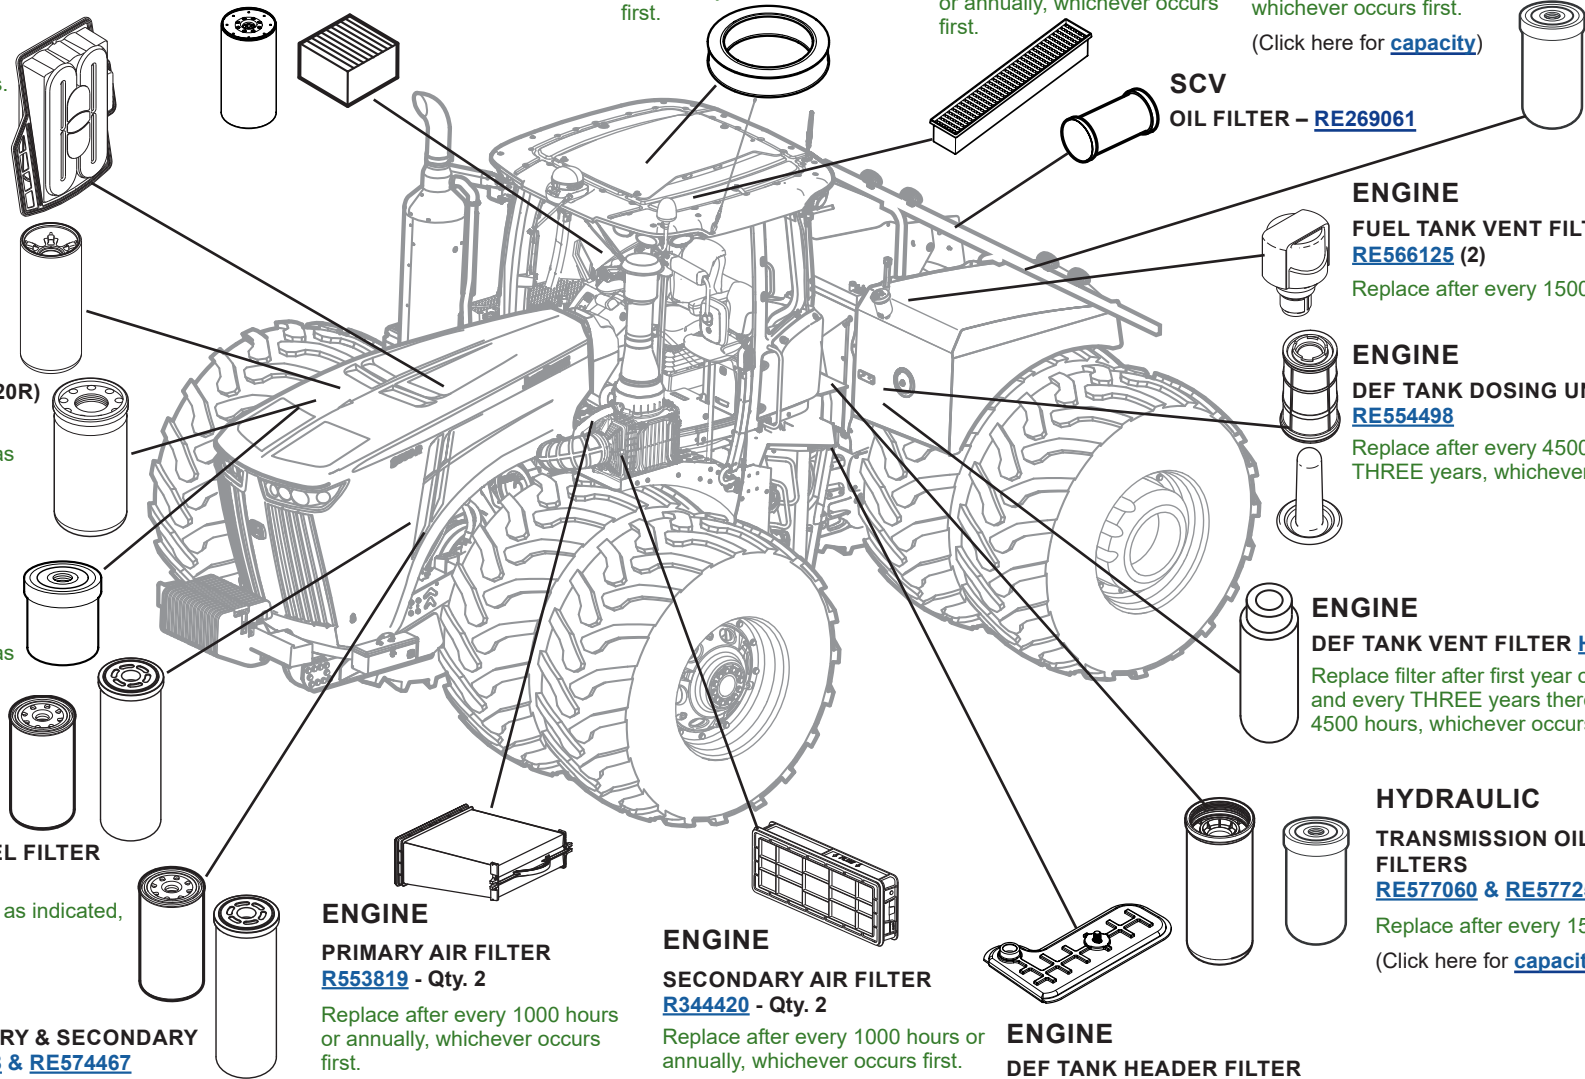

JOHN DEERE

Genuine Parts and Service

CAPACITIES

9R Four Wheel Drive Final Tier 4 (FT4) Series Tractors - 9370R, 9420R, 9470R, 9520R, 9570R & 9620R

CAPACITIES (Approximate):

Fuel Tank:

9370R, 9420R & 9470R - SR Axles.....	1173 L (310 gal)
9520R, 9570R & 9620R - DR Axles	1514 L (400 gal)

Cooling System Including Overflow Tank:

Cool-Gard™ II

9370R.....	50 L (13.2 gal)
9420R, 9470R & 9520R	56.5 L (14.9 gal)
9570R & 9620R.....	62 L (16.3 gal)

Crankcase including Filter:

Plus-50™ II

9370R.....	34 L (9.0 gal)
9420R, 9470R & 9520R	48 L (12.7 gal)
9570R & 9620R.....	43.5 L (11.5 gal)

Diesel Exhaust Fluid John Deere Diesel Exhaust Fluid™

.....	83 L (22.0 gal)
-------	-----------------

Hydraulic Reservoir:

Hy-Gard™

Full - Cold	93 L (24.5 gal)
Min - Cold	81 L (21.5 gal)

Transmission/Hydraulic Reservoir:

Hy-Gard™

9370R, 9420R & 9470R - SR Axles Stand. Flow.....	265 L (70 gal)
9370R, 9420R & 9470R - SR Axles High Flow.....	268.5 L (71 gal)
9520R, 9570R & 9620R - DR Axles Stand. Flow	208 L (55 gal)
9520R, 9570R & 9620R - DR Axles High Flow	212 L (56 gal)

Hydraulic/Transmission/Axle without 3-point rear hitch and PTO

Hy-Gard™

9370R, 9420R & 9470R	276 L (73 gal)
9520R, 9570R & 9620R	220 L (58 gal)

Hydraulic/Transmission/Axle with 3-point rear hitch and PTO

Hy-Gard™

9370R, 9420R & 9470R	284 L (75 gal)
9520R, 9570R & 9620R	227 L (60 gal)

[Return to Filter Overview](#)

