

# JOHN DEERE PROTECT™

PROTECT YOUR PERFORMANCE. PROTECT YOUR TIME. PROTECT YOUR COST.

6R Series Utility Tractors



JOHN DEERE



Buyers of **new John Deere 6R Series utility tractors** can now **lock in annual maintenance costs<sup>1</sup>** and be in a better position to **prevent downtime**. It's all possible with John Deere Protect™. Available to customers who purchase a new 6R tractor, John Deere Protect offers a plan that is designed to **improve performance and efficiency** and **reduce costs**.

You can buy the John Deere Protect **Maintenance Plus Plan** when purchased in conjunction with a PowerGard™ Comprehensive Protection Plan<sup>2</sup>. The John Deere Protect plan is designed to help you maintain original performance and uptime of your new John Deere 6R tractor for the first 36 months/1,500 or 3,000 engine hours **(with no deductible<sup>3</sup> and no additional charges)**.

## MAINTENANCE PLUS

John Deere Protect Maintenance Plus Plan<sup>4</sup> includes:

- 3 Annual Expert Inspections
- 3 to 7 Scheduled Maintenance Events<sup>5</sup>
- 24-Hour Uptime Assurance

*Minimum PowerGard Comprehensive coverage of 36 months/1,500 or 3,000 hours must be purchased to match the John Deere Protect plan desired. Longer PowerGard plans can be purchased if desired.*

<sup>1</sup>Excludes diesel fuel and diesel exhaust fluid.

<sup>2</sup>PowerGard Comprehensive Protection Plan with a minimum term of 36 months/1,500 or 3,000 hours must be purchased separately to be eligible for John Deere Protect extended service plans. Additional details are included in the selling descriptions of each included plan.

<sup>3</sup>PowerGard deductible applies to any failures under PowerGard coverage.

<sup>4</sup>For complete plan details, contact a participating dealer near you.

<sup>5</sup>Number of Scheduled Maintenance Events varies based on specific model and John Deere Protect plan. Please see your participating dealer for complete details.

# JOHN DEERE PROTECT™

PROTECT YOUR PERFORMANCE. PROTECT YOUR TIME. PROTECT YOUR COST.

## 6R Series Utility Tractors



JOHN DEERE

So what's included with each component of the John Deere Protect plan? Read on to learn how this valuable coverage helps you heighten 6R tractor performance and productivity while keeping operating expenses in check.

### Expert Inspections

The John Deere Protect Maintenance Plus Plan includes three end-of-season expert inspections to help make sure your 6R tractor is ready to run for ensuing field work. The 83-point inspection ensures that all critical areas of the tractor are evaluated by an expert technician from your local dealer and identifies potential problems to avoid costly, unplanned downtime. Coverage term is 36 months/1,500 or 3,000 engine hours.

### Maintenance Events<sup>6</sup>

The John Deere Protect Maintenance Plus Plan includes all of the recommended preventative maintenance at the required hour intervals to ensure your 6R tractor is properly maintained for upcoming field work. Local dealer expert technicians perform all maintenance and utilize Genuine John Deere parts and fluids. See chart for maintenance schedule details. Coverage term is 36 months/1,500 or 3,000 engine hours.

### 24-Hour Uptime Assurance

John Deere Protect Uptime Assurance enables you to keep working if your 6R tractor is sidelined and cannot be repaired within 24 hours. Subject to machine availability, a rental machine will be provided while yours is being repaired. To qualify, every expert inspection and maintenance event (and all of the suggested adjustments and repairs) must be completed by your local John Deere dealer. Coverage term is 36 months/1,500 or 3,000 engine hours.

To learn more about the benefits of John Deere Protect, contact a participating John Deere Dealer.

<sup>6</sup>Daily maintenance items are not covered.

## JOHN DEERE PROTECT MAINTENANCE SCHEDULE

Service Item	1,500 HOUR OFFERING		3,000 HOUR OFFERING		Break-In	500	750	1,000	1,500	2,000	2,250	2,500	3,000
	■	■	■	■									
<b>OVERALL</b>	■	■	■	■	■	■	■	■	■	■	■	■	■
Lubricate all grease fittings	■	■	■	■	■	■	■	■	■	■	■	■	■
<b>CAB</b>	■	■	■	■	■	■	■	■	■	■	■	■	■
Replace Cab Recirculation Air Filter				■	■								■
Replace Cab Fresh Air Filter				■	■								■
<b>ENGINE</b>	■	■	■	■	■	■	■	■	■	■	■	■	■
Replace Engine Oil and Filter	■	■	■	■	■	■	■	■	■	■	■	■	■
Replace Primary Engine Air Filter				■	■								■
Replace Open Crankcase Ventilation Filter				■	■								■
<b>FUEL</b>	■	■	■	■	■	■	■	■	■	■	■	■	■
Replace Primary and Secondary Fuel Filters		■	■	■	■	■	■	■	■	■	■	■	■
Replace Diesel Exhaust Fluid (DEF) dosing Unit Filter													■
<b>HYDRAULIC</b>	■	■	■	■	■	■	■	■	■	■	■	■	■
Replace Transmission Oil Filter	■	■	■	■	■	■	■	■	■	■	■	■	■
Replace Hydraulic Oil Filter	■	■	■	■	■	■	■	■	■	■	■	■	■
Replace Transmission/Hydraulic Oil				■	■								■
<b>AXLES</b>	■	■	■	■	■	■	■	■	■	■	■	■	■
Replace Axle Housing Oil	■	■			■	■			■				■
Replace Final Drives Oil	■	■	■*	■*	■*	■	■	■	■	■*	■*	■*	■
<b>IF EQUIPPED</b>	■	■	■	■	■	■	■	■	■	■	■	■	■
Replace Front PTO Oil Filter		■	■	■	■	■	■	■	■	■	■	■	■
Replace Front PTO Oil				■	■								■
Replace Electrical Hydraulic Pump Oil	■		■	■	■						■		■

■ = 6110R, 6120R, 6130R    ■ = 6145R, 6155R, 6175R, 6195R, 6215R, 6230R, 6250R

\*Front-wheel drive axle – final drives with brake