


Instructions to operate 4720 or 4920 SprayStar™ Simulator. (12/10/2005)

Note: This is a simulator. Not all variables will be present and shown (actual load on engine, boom unfolding and folding functions). The simulator is a tool to use for training and in some instances troubleshooting.



Click on START to begin utilizing the SprayStar training tool.

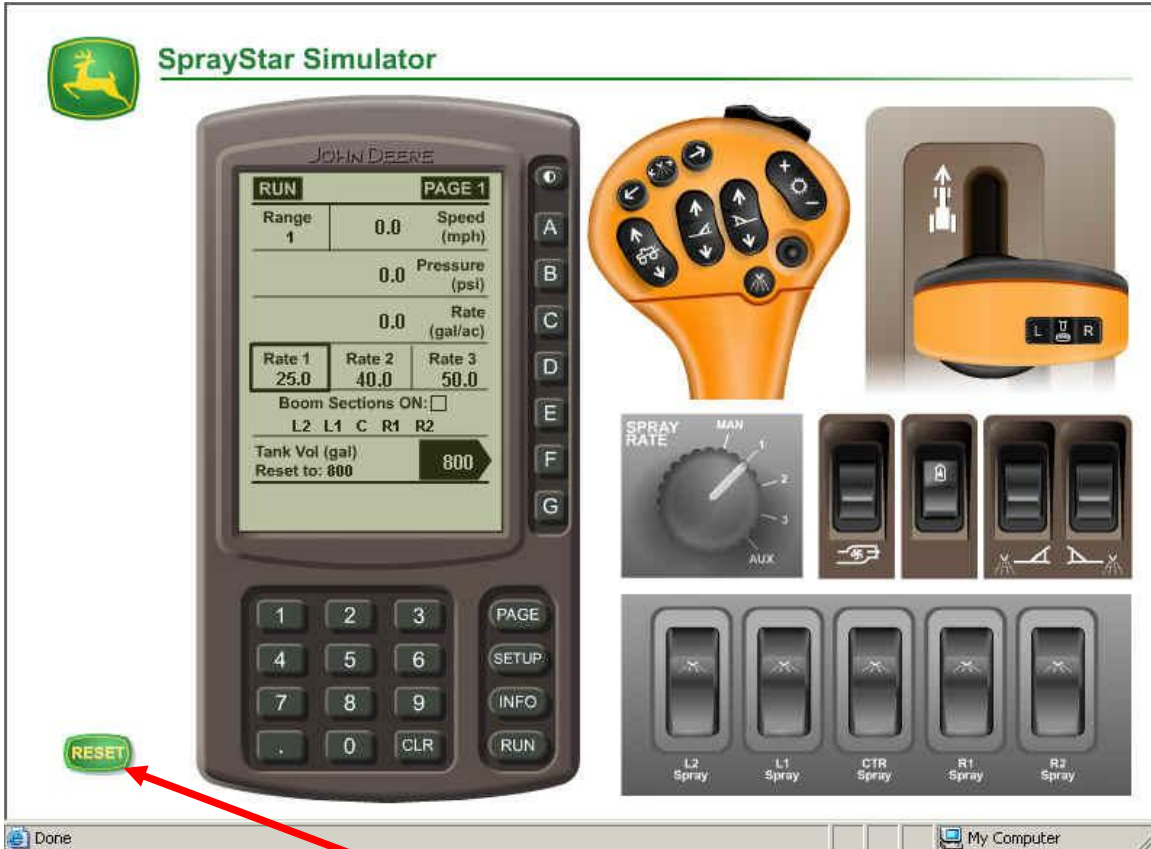

To restart the simulator – please click RESET at any time during the program