

# REPLACEMENT PARTS GUIDE

## 4049M Compact Utility Tractor (1LV4049MTHJ200001- ) (Europe Edition)

### ELECTRICAL



**KEY**  
[RE183935](#)



**ROTARY SWITCH**  
[LVA21501](#) (14 V)



**LED WORK LIGHT, OOS**  
[AM143579](#) (12 V)



**WET DISCHARGE BATTERY**  
[TY26442B](#) (12 V)



**HEADLIGHT**  
[R136239](#) (12 V)

### FUEL & AIR



**FILLER CAP**  
[AL213202](#)

### TRANSMISSION/ HYDRAULIC



**TRANSMISSION/HYDRAULIC OIL**  
[TY22000](#) (John Deere Low Viscosity Hy-Gard™ - 47.3 L (12.5 gal))  
Change after every 400 Hrs. or annually.



**OIL FILTER**  
[RE45864](#) (TRANSMISSION)  
[LVA10419](#) (HYDRAULIC)  
Change after every 400 Hrs.



**V - BELT**  
[LVU29376](#) (LGTH = 1112 mm,  
WIDTH = 13.4 mm, TK = 9.6 mm)



### ENGINE



**ENGINE OIL**  
[TY26668](#) (10W-30 PLUS-50™ II)  
(5.4 L (1.4 gal.))

Change Every 200 Hrs or Annually, whichever comes first.



**FUEL FILTER**  
[MIU800645](#)

Change after every 400 Hrs. or annually.



**AIR FILTER**  
[RE68048](#) (PRIMARY)  
[RE68049](#) (SECONDARY)

Change every 600 hrs. or annually.



**JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE**  
[TY6341](#)  
**GREASE GUN**  
[TY26183](#)

Change As Required.



**FUEL-WATER SEPARATOR**  
[AM881823](#) (SEPARATOR)  
[M811032](#) (FILTER ELEMENT)

Change after every 400 Hrs. or annually.



**OIL FILTER**  
[M806419](#)

Change Every 400 Hrs or Annually, whichever comes first.



**HOME MAINTENANCE KIT**  
[LVA21039](#)

### AXLE



**TIE ROD**  
[LVA14951](#) (ASSEMBLY)  
[LVA14960](#) (LH)  
[LVA14959](#) (RH)



**FRONT AXLE OIL**  
[TY22000](#) (John Deere Low Viscosity Hy-Gard™)

Change every 50/400/600 Hrs.