

REPLACEMENT PARTS GUIDE

5 Series Tractors - 5310 (005119-) and 5203S (000001 -) (India Edition)



TRANSMISSION / HYDRAULIC

OIL ELEMENT



[RE45864](#)

Replace initially after 100 hours and 1100 hours and after every 500 hours and every 1250 hours.

ENGINE

OIL FILTER



[RE507204](#) (FOR INDIA)
[T19044](#) (FOR EXPORT)

Replace initially after 100 hours and every 250 hours and annually.

PRIMARY AIR FILTER

[RE68048](#)

SECONDARY AIR FILTER

[RE68049](#)

Replace every 250 hours and annually.

PRIMARY FUEL FILTER

[RE508953](#)

[RE60021](#) (5310)

FINAL FUEL FILTER

[RE508954](#)



Change primary and secondary filter inserts alternatively.(eg. If primary insert is changed at 250 hours, change secondary inserts at 500 hours, again Primary at 750 hours likewise).

CAPACITIES

5 Series Tractors - 5310 (005119-) and 5203S (000001 -) (India Edition)

CAPACITIES (Approximate):

Fuel Tank:

.....68 L (17.9 gal)

Cooling System:

Cool-Gard™ II

.....9.5 L (2.5 gal)

Transmission and Hydraulic System:

Hy-Gard™

.....38 L (10 gal)

(5310) MFWD.....39 L (10.3 gal)

FRONT AXLE:

Hy-Gard™

MFWD Differential Housing Axle Oil.....4.5 L (1.18 gal)

MFWD Wheel Hub Axle Oil (Each).....0.7 L (0.18 gal)

REPLACEMENT PARTS GUIDE

5 Series Tractors - 5310 (005119-) and 5203S (000001 -) (India Edition)

ENGINE

BRAKE DISK
[RE45938](#) 5310(-020278)
[R113948](#) (DRIVE DISK) 5310(-020278)
[L77358](#) (ACTUATING DISK)

CLUTCH DISK
[RE45662](#) (CLUTCH CARRARO) (-002526)
[RE242274](#) (PTO)
[SJ29351](#) (TRACTION)

BATTERY
[RE208816](#)

ALTERNATOR
[RE72915](#) (5310) (-006104)

FAN BELT DRIVE
[R216949](#)



CAB

SEAT
[RE207357](#) (ASSEMBLY)
[RE73192](#) (BOTTOM)
[RE212692](#) (BACK)

AXLE

TIE ROD
[RE204878](#) (MFWD STEERING CYLINDER (5310) (-020278))
[RE204879](#) (MFWD STEERING CYLINDER (5310) (-020278))
[RE208624](#) (ASSEMBLY) (ADJUSTABLE FRONT AXLE)
[RE190506](#) (RH)
[RE190481](#) (LH)
[RE271440](#) (ASSEMBLY) (MFWD) (5310) (020279-)
[RE271440](#) (BALL JOINT)
[RE271440](#) (90 DEGREE)