

REPLACEMENT PARTS GUIDE

5305 Tractor Term - IIIA Engine

ENGINE



PRIMARY FUEL FILTER

[RE508953](#)



FINAL FUEL FILTER

[RE508954](#)

Replace after every 500 hours.



OIL FILTER

[RE507204](#) (FOR INDIA)

[T19044](#) (FOR EXPORT)

Change every 100 hours and 500 hours.



PRIMARY AIR FILTER

[SU29300](#)



SECONDARY AIR FILTER

[SU29301](#)

Change after every 250 hours or annually whichever comes first.



HYDRAULIC



FILTER ELEMENT

[RE45864](#)

Replace after initial 100 hours and change every 500 hours and every 1250 hours.

REPLACEMENT PARTS GUIDE

5305 Tractor Term - IIIA Engine

CAPACITIES (Approximate):

Fuel Tank:

..... 61 L (16.1 gal)

Crankcase including Filter Change:

Plus-50™

..... 8.5 L (1.8 gal)

Transmission and Hydraulic System:

Hy-Gard™

Grease Axle 32 L (8.4 gal)



REPLACEMENT PARTS GUIDE

5305 Tractor Term - IIIA Engine

ENGINE



BRAKE DISK
[L116596](#) (BRAKES)



BELT DRIVE
[R216949](#) (LGTH = 1360 mm)
[SU41879](#) (LGTH = 1315 mm)
[R73784](#) (LGTH = 1300 mm)



CLUTCH DISK
[SJ29350](#) (DUAL CLUTCH)
[RE229970](#) (SINGLE CLUTCH)
[SJ23064](#)



ALTERNATOR
[RE554568](#) (120 A)



BATTERY
[SJ36374](#) (WET CHARGED BATTERY)



CAB



SEAT
[RE73192](#) (WITH POWER STEERING)
[RE212692](#) (SEAT BACK)
[SJ18041](#) (BOTTOM)

AXLE



TIE ROD
[RE208624](#) (TIE ROD WITH POWER STEERING)
[RE190481](#) (LH)
[RE190506](#) (RH)
[RE192255](#)
[RE234118](#) (FRONT AXLE 2WD)