

FILTER OVERVIEW WITH SERVICE INTERVALS AND CAPACITIES

6000 Series Tractors - 6200, 6200L, 6300, 6300L, 6400, 6400L, 6500 and 6500L

CAB

 
 
FRESH AIR FILTER - HEAVY DUTY

(6200 - 6500) - [AL177185](#) (2)

AIR FILTER - STANDARD

(6200 - 6500) - [AL177184](#) (2)

Clean as required. Replace after every 1500 hours, or 2 years, or with Engine Primary Air Filter, whichever occurs first.



CAB

RECIRCULATION AIR FILTER ELEMENT

(6200 - 6500) W/AC - [L101794](#) (2)

Clean as required. Replace after every 1500 hours, or 2 years, or with Engine Primary Air Filter, whichever occurs first.

HYDRAULICS

HYDRAULIC OIL FILTER - [AL118036](#)

With 25/41 cm³ resp. 1.53/2.50 inch³ hydraulic pump

Replace after first 100 hours, then after first 750 hours and every 750 hours thereafter. Change Transmission Oil Filter as well.


(Click here for [capacity](#))



ENGINE

FUEL FILTER - [RE62419](#)

Replace after every 500 hours.

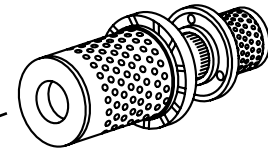

ENGINE

MAIN CARTRIDGE AIR FILTER - [AL78223](#)

Clean up to 5 times. Replace after every 1500 hours or 2 years, whichever occurs first.

ENGINE

SAFETY ELEMENT AIR FILTER - [AL78224](#)

Never Clean. Replace at every third change of Primary Air Filter, or after 1500 hours, whichever occurs first.

TRANSMISSION

OIL FILTER - [AL156625](#)

(length = 158 mm)

Replace after first 100 hours, then after first 750 hours and every 750 hours thereafter. Change Hydraulic Oil Filter as well.

(Click here for [capacity](#))



ENGINE

OIL FILTER - [T19044](#)

Replace after first 100 hours, then after first 500 hours and every 500 hours thereafter or annually, whichever occurs first.

The extended 500 hour interval is only allowed if using Plus-50™ II oil, JD OEM Oil Filter and diesel fuel with sulfur content less than 15mg/kg (15 ppm).

Change Oil and Filter after every 250 hours, if conditions are not met.

(Click here for [capacity](#))

CAB

FILTER ELEMENT (6200 - 6500) - [L101786](#) (2)

Replace after every 1,500 hours or every 2 years and as required.



JOHN DEERE

Genuine Parts and Service

CAPACITIES

6000 Series Tractors - 6200, 6200L, 6300, 6300L, 6400, 6400L, 6500 and 6500L

CAPACITIES (Approximate):

Fuel Tank:

Without Cab	113 L (29.9 gal)
With/without Cab	116 L (30.6 gal)
With/without Cab	160 L (42.2 gal)
Optional	165 L (43.5 gal)
Low Profile Tractors	116 L (30.6 gal)

Cooling System:

Cool-Gard™

With Cab	13.5 L (3.6 gal)
Without Cab	11 L (2.9 gal)

Crankcase:

Plus-50™

.....	12 L (3.2 gal)
-------	----------------

Transmission and Hydraulic System:

Hy-Gard™

SyncroPlus™	52 L (13.7 gal)
PowrQuad™	49 L (12.9 gal)
Extra with Creeper	1 L (0.3 gal)
Extra with Front Wheel Drive	3 L (0.8 gal)

Front Wheel Drive:

Front Axle Housing	5 L (1.3 gal)
Final Drive Housings	0.8 L (0.21 gal)

[Return to Filter Overview](#)

