

 
FILTER OVERVIEW WITH SERVICE INTERVALS AND CAPACITIES

6700 Self-Propelled Sprayer

CAB
**FRESH AIR FILTER,
HEAVY DUTY – [RE67830](#)**
**FRESH AIR FILTER,
STANDARD – [RE12793](#)**

up to serial no. 5999


Replace after every 500 hours or annually, whichever comes first.

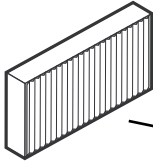

CAB
ACTIVATED CARBON FILTER KIT – [AN206280](#)

From serial no. 6000

 Do NOT clean dry or wet. Replace every 500 hours or once every year, whichever comes first, and as required.

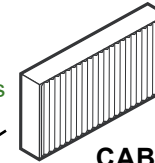


CAB
**RECIRCULATION
AIR FILTER – [AH92463](#)**

up to serial no. 5999

Replace after every 500 hours or annually, whichever comes first.


ENGINE
PRIMARY AIR FILTER – [AT44377](#)

 Clean every 50 hours or whenever the indicator light glows and replace as required.

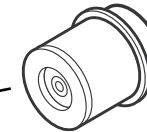

ENGINE
SECONDARY AIR FILTER – [AT44378](#)

 Do Not clean.
Change only with primary air filter.

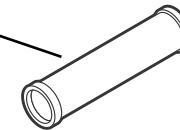

HYDRAULICS
HYDRAULIC FILTER – [RE17380](#)

Replace after 400 hours.

(Click here for [capacity](#))



ENGINE
FUEL FILTER EXTENDED LIFE – [RE62419](#)
NORMAL STANDARD – [RE60021](#)

Replace annually.



ENGINE
OIL FILTER – [RE59754](#)
Replace after 100 hours and then every 200 hours.
If John Deere Plus-50™ engine oil and a John Deere filter are used, the oil and filter service interval may be extended 50 percent, up to 500 hours.

(Click here for [capacity](#))



CAPACITIES

6700 Self-Propelled Sprayer

CAPACITIES (Approximate):

Fuel Tank:

6700..... 170 L (45 gal)

Cooling System with Heater:

6700..... 19 L (20 qt)

Crankcase including Filter:

6700..... 11.3 L (3 gal)

Hydraulic Reservoir (Full to Sight Glass):

6700..... 34.5 L (9.12 gal)

Hydraulic System:

6700..... 45.4 L (12 gal)

Final Drives (Each Side):

6700..... 2 L (0.53 gal)

[Return to Filter Overview](#)

