

FILTER OVERVIEW WITH SERVICE INTERVALS AND CAPACITIES

 
6E Final Tier 4 (FT4) Series Utility Tractors – 6105E, 6120E, 6135E

ENGINE

PRIMARY AIR FILTER
[SU20768](#)

SECONDARY AIR FILTER
[RE253519](#)

Replace annually and as required.

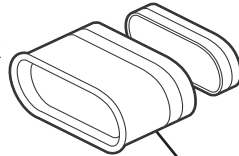


CAB

FRESH AIR FILTER
[RE198488](#)

RECIRCULATION AIR FILTER
[RE195491](#)

 Clean every 250 hours.

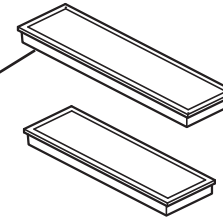

ENGINE

PRIMARY FUEL FILTER
[RE551507](#)

SECONDARY FUEL FILTER
[RE551508](#)

Replace every 500 hours.

 


HYDRAULIC

OIL FILTER
[SJ11792](#)

Replace at 100 hours then every 500 hours.

(Click here for [capacity](#))

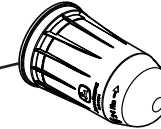

ENGINE

OPEN CRANKCASE VENTILATION (OCV) FILTER
[RE540710](#)
[DZ105796](#)

Clean every 1000 hours.



ENGINE

OIL FILTER
[RE504836](#)

Replace at 100 hours then every 500 hours or annually, whichever occurs first.

(Click here for [capacity](#))



ENGINE

DIESEL EXHAUST FLUID (DEF) DOSING UNIT FILTER
[RE554498](#)

Replace every 4500 hours or every three years of operation, whichever occurs first.



JOHN DEERE
Genuine Parts and Service

CAPACITIES

6E Final Tier 4 (FT4) Series Utility Tractors – 6105E, 6120E, 6135E

CAPACITIES (Approximate):

Fuel Tank:

..... 168 L (44.4 gal)

Cooling System:

Cool-Gard™ II

Open Operator Station 18.6 L (4.7 gal)

Cab 19.1 L (5 gal)

Crankcase:

Plus-50™ II

..... 15 L (4 gal)

Transmission/Hydraulics:

Hy-Gard™

..... 58 L (15.3 gal)

Diesel Exhaust Fluid (DEF) Tank:

John Deere™ Diesel Exhaust Fluid

..... 10.9 L (2.9 gal)

Front-wheel Drive Axle Housing:

GL5

..... 5 L (1.32 gal)

Wheel Hub:

GL5

..... 0.8 L (0.21 gal)

[Return to Filter Overview](#)