

FILTER OVERVIEW WITH SERVICE INTERVALS AND CAPACITIES


9410, 9510 and 9610 Maximizer and Sidehill Combines

ENGINE

PRIMARY AIR FILTER
(9410) – [AR70106](#)

PRIMARY AIR FILTER
(9510, 9610) – [AH148880](#)

Change annually and clean
or change as required.

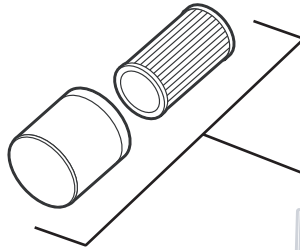

ENGINE

SECONDARY AIR FILTER
(9410) – [AR70107](#)

SECONDARY AIR FILTER
(9510, 9610) – [RE63932](#)

Change secondary filter
only with primary filter.

ENGINE

 
OIL FILTER (9410) – [RE59754](#)

OIL FILTER (9510, 9610) – [RE57394](#)

Replace every 250 hours or once a season,
whichever occurs first.
Fill crankcase with seasonal viscosity grade oil
or Torq-Gard Supreme™ (250 hours change
interval).

Change oil every 500 hours when using
John Deere Plus-50™ II engine oil and a
John Deere filter


Note: Change oil every 100 hours if fuel
contain more than 0.5% sulfur.



CAB

RECIRCULATION AIR FILTER
(9410 – 9610) – [AH115836](#)

Clean or replace every 200
hours and as required.

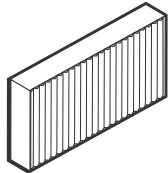

ENGINE

FUEL FILTER (9410) – [RE62419](#)

FUEL FILTER (9510, 9610) – [AR86745](#)

FUEL WATER SEPARATOR FILTER
(9410 – 9610) – [AT81478](#)

Replace every 500 hours and as required.




CAB

AIR FILTER, STANDARD
(9410 – 9610) – [AH115833](#)

AIR FILTER, HEAVY DUTY
(9410 – 9610) – [AH168783](#)



Clean or replace after 50
hours and as required.

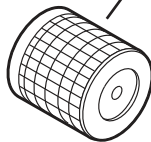

HYDRAULIC/HYDROSTATIC/ ENGINE GEARCASE

FILTER ELEMENT
(9410 – 9610) – [AH128449](#)

Replace every 400 hours or yearly.
Note: Replace all three filters at a time.

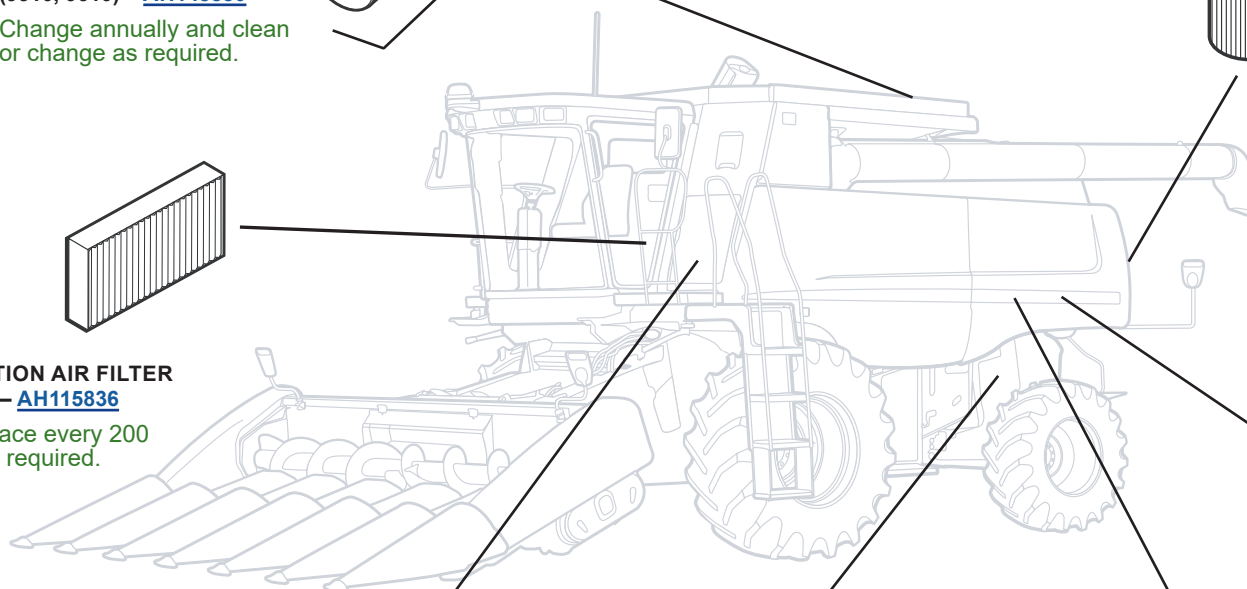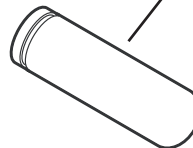

JOHN DEERE

Genuine Parts and Service

CAPACITIES

9410, 9510 and 9610 Maximizer and Sidehill Combines

CAPACITIES (Approximate):

Fuel Tank:

9410, 9510, 9510SH, 9610..... 530 L (140 gal)

Cooling System with Heater: Low Silicate Antifreeze

9410..... 36 L (9.5 gal)

9510, 9510SH..... 34 L (8.9 gal)

9610..... 38 L (10 gal)

Engine Crankcase with Filter: Plus-50™

9410..... 18.9 L (4.99 gal)

9510, 9510SH, 9610..... 28.5 L (7.5 gal)

Transmission: GL-5

9410, 9510, 9610..... 9.6 L (2.5 gal)

9510SH..... 7 L (1.8 gal)

Final Drives (Each): GL-5

9410..... 8 L (2.11 gal)

9510, 9510SH..... 8.5 L (2.2 gal)

9610 Ring and Pinion 8.5 L (2.2 gal)

9610 Planetary 3.8 L (1 gal)

Feeder House Reverser Gearcase:

GL-5

9410, 9510, 9510SH, 9610..... 0.9 L (0.2 gal)

Primary Countershaft Drive Gearcase:

GL-5

9410, 9510, 9510SH, 9610..... 1.4 L (0.3 gal)

Straw Walker Drive Gearcase:

GL-5

9410, 9510, 9510SH, 9610..... 0.7 L (0.2 gal)

Dual-Range Cylinder Drive Gearcase:

GL-5

9410, 9510SH, 9610..... 1.9 L (0.5 gal)

Engine Gearcase:

GL-5

9410, 9510, 9510SH, 9610..... 16 L (4.2 gal)

Loading Auger Gearcase:

GL-5

9410, 9510, 9510SH, 9610..... 3.8 L (1 gal)

Hydraulic / Hydrostatic Reservoir:

Low Viscosity Hy-Gard™

9410, 9510, 9510SH, 9610..... 34 L (9 gal)

[Return to Filter Overview](#)

