

FILTER OVERVIEW WITH SERVICE INTERVALS AND CAPACITIES

2026R Compact Utility Tractor

ENGINE

INLINE FUEL FILTER - [AM116304](#)

Replace every 400 hours and annually.

(Click here for [capacity](#))



ENGINE

FUEL FILTER -

[M801101](#) USE WITH [MIA883607](#)
[MIU804763](#) USE WITH [MIA884997](#)

Replace after every 400 hours or annually, whichever occurs first.

(Click here for [capacity](#))



ENGINE

OIL FILTER - [M806418](#)

Replace every 200 hours and annually if less than 200 hours of operation

(Click here for [capacity](#))



TRANSMISSION

HYDRAULIC FILTER - [LVA16054](#)

Replace after first 50 hours and every 200 hours.

(Click here for [capacity](#))



ENGINE

PRIMARY AIR FILTER - [M113621](#) (- 200380),


[LVU34503](#) (200381 -)

SECONDARY AIR FILTER - [M123378](#) (- 200380),

[LVU34504](#) (200381 -)

Replace every 400 hours and as required. Check and service every 10 hours/daily, every 200 hours and annually.

(Click here for [capacity](#))

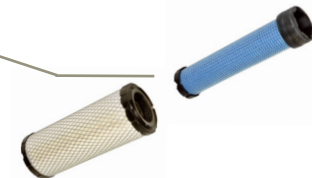

JOHN DEERE

Genuine Parts and Service

https://www.deere.com/en_US/parts/parts_by_industry/ag/fmi/filter_maintenance_information.page

CAPACITIES

2026R Compact Utility Tractor

CAPACITIES (Approximate):

Fuel Tank:

..... 20.4 L (5.3 gal)

**Cooling System:
Cool-Gard™ II**

..... 3.7 L (0.8 gal)

**Crankcase with Filter:
Plus-50™**

..... 2.7 L (0.6 gal)

**Transmission and Hydraulic System:
Hy-Gard™**

..... 14.4 L (3.8 gal)

**Front Axle:
Hy-Gard™**

..... 2.8 L (0.6 gal)

[Return to Filter Overview](#)

