

REPLACEMENT PARTS GUIDE

2R Series - 2036R (GH200001-) Compact Utility Tractors



ENGINE

PRIMARY AIR FILTER


[RE68048](#)



SECONDARY AIR FILTER

[RE68049](#)

 Change after every 600 hours and replace As Required.



OIL FILTER

[M806419](#)

Replace after every 200 hours or Annually, Whichever occurs first.



FUEL FILTER

[MIU800645](#)

Replace after every 400 hours or Annually, Whichever occurs first.




CAB

FRESH AIR FILTER

[HF235742801](#)

 
Change after every 50 hours and As Required.



FRESH AIR FILTER

[HF235742801](#)

 Change after every 50 hours and As Required.



TRANSMISSION

OILFILTER

[LVA14703](#)

Replace after every 400 hours and Change every 1200 hours or 3 years.



HYDRAULIC FILTER

[LVA16054](#)

Replace as Needed.



CAPACITIES

2R Series - 2036R (GH200001-) Compact Utility Tractors

CAPACITIES (Approximate):

Fuel Tank:

..... 32 L (8.5 gal)

Cooling System with Heater:

(Cool-Gard II)

Open Operation Station.....5.2 L (1.1 gal)

Cab.....5.7 L (1.2 gal)

Crankcase with Filter

(Plus-50™ II)

.....4.3 L (1.1 gal)

Transmission and Hydraulic system

Hy-Gard™

.....23.5 L (5.2 gal)

Front Axle:

Hy-Gard™

..... 3.8 L (0.8 gal)

[RETURN TO FILTER OVERVIEW](#)

 
REPLACEMENT PARTS GUIDE

2R Series - 2036R (GH20001-) Compact Utility Tractors

ENGINE



BRAKE DISK
[LVA19938](#)



CLUTCH DISK
[SJ13448](#)



BATTERY
[TY26498](#) (DRY CHARGED)
[TY27831B](#) (WET CHARGED)



ALTERNATOR
[LVA21236](#) (85 A)



FAN BELT DRIVE
[M149866](#) (IDLERS AND PULLEYS)
[LVU30203](#) (DIESEL ENGINE)
[M136137](#) (GEAR CASE)



CAB



SEAT
[LVA22544](#) (OOS)
[LVA22545](#) (CAB)

AXLE



TIE ROD
[LVA15994](#) (ASSEMBLY)
[LVA15996](#) (RH)
[LVA15995](#) (LH)