

REPLACEMENT PARTS GUIDE

3038R Compact Utility Tractor (1LV3038REHJ200001-)

ENGINE



ENGINE OIL
TY26668 (10W-30 PLUS-50™ II) (5.4 L (1.4 gal))
 Change Every 200 Hrs or Annually, whichever comes first.



FUEL FILTER
MIU800645
 Change after every 400 Hrs/Annually.



AIR FILTER
RE68048 (PRIMARY)
RE68049 (SECONDARY)
 Change every 600 hrs. or annually.



JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE
TY6341
GREASE GUN
TY26183
 Change As Required.



OIL FILTER
M806419
 Change Every 200 Hrs or Annually, whichever comes first.



FUEL-WATER SEPARATOR
AM881823 (SEPARATOR)
M811032 (FILTER ELEMENT)
 Change after every 400 Hrs. or annually.



HOME MAINTENANCE KIT
LVA21039

AXLE



TIE ROD
LVA19527 (ASSEMBLY)
LVA14960 (LH)
LVA14959 (RH)



FRONT AXLE OIL
TY22000 (John Deere Low Viscosity Hy-Gard™)
 Change every 50/400/600 Hrs.



ELECTRICAL



KEY
RE183935



ROTARY SWITCH
LVA21501



BATTERY
TY27831B (12 V)



LED WORK LIGHT, OOS
AM143579 (12 V)



HEADLIGHT
R136239 (12 V 60/55 W)

FUEL & AIR



FILLER CAP
AL213202

CAB



CAB FILTER
MIU10010
 Clean or replace after every 50 hours and as required.



RECIRCULATION AIR FILTER
MIU10011
 Clean or replace after every 50 hours and as required.

TRANSMISSION/ HYDRAULIC



TRANSMISSION/HYDRAULIC OIL
TY22000 (47.3 L (12.5 gal.))
 Change after every 400 Hrs. or annually.



OIL FILTER
LVA13065 (TRANSMISSION) (HH100001 -)
LVA12678 (HYDRAULIC)
 Change after every 400 Hrs. or Annually.



V - BELT
LUVU29376 (LGTH = 1112 mm, WIDTH = 13.4 mm, TK = 9.6 mm)