

# REPLACEMENT PARTS GUIDE

## 3039R Compact Utility Tractor (1LV3039R\*HJ100001- )

### ENGINE

**ENGINE OIL**  
**TY26668 (10W-30 PLUS-50™ II) (5.4 L (1.4 gal))**  
 Change Every 200 Hrs or Annually, whichever comes first.

**FUEL FILTER**  
**MIU803127 ( HH100001 - )**  
 Change after every 400 Hrs/Annually.

**AIR FILTER**  
**RE68048 (PRIMARY)**  
**RE68049 (SECONDARY)**  
 Change every 600 hrs. or annually.

**JD MULTI PURPOSE HD LITHIUM COMPLEX GREASE**  
**TY6341**  
**GREASE GUN**  
**TY26183**  
 Change As Required.

**OIL FILTER**  
**M806419**  
 Change Every 200 Hrs or Annually, whichever comes first.

**FUEL-WATER SEPARATOR**  
**MIU803221 (SEPARATOR)**  
**MIU802421 (FILTER ELEMENT)**  
 Change after every 400 Hrs. or annually.

**DIESEL PARTICULATE FILTER**  
**MIA885302**

**HOME MAINTENANCE KIT**  
**LVA21039**

### AXLE

**TIE ROD**  
**LVA19527 (ASSEMBLY)**  
**LVA14960 (LH)**  
**LVA14959 (RH)**

**FRONT AXLE OIL**  
**TY22000 (John Deere Low Viscosity Hy-Gard™)**  
 Change every 50/400/600 Hrs.



### ELECTRICAL

**KEY**  
**RE183935**

**ROTARY SWITCH**  
**LVA21501**

**BATTERY**  
**TY27831B (12 V)**

**LED WORK LIGHT, OOS**  
**AM143579 (12 V)**

**HEADLIGHT**  
**R136239 (12 V 60/55 W)**

### FUEL & AIR

**FILLER CAP**  
**AL213202**

### CAB

**CAB FILTER**  
**MIU10010**  
 Clean or replace after every 50 hours and as required.

**RECIRCULATION AIR FILTER**  
**MIU10011**  
 Clean or replace after every 50 hours and as required.

### TRANSMISSION/ HYDRAULIC

**TRANSMISSION/HYDRAULIC OIL**  
**TY22000 (47.3 L (12.5 gal.))**  
 Change after every 400 Hrs. or annually.

**OIL FILTER**  
**LVA13065 (TRANSMISSION) (HH100001 - )**  
**LVA12678 (HYDRAULIC)**  
 Change after every 400 Hrs. or Annually.

**V - BELT**  
**LUVU29376 (LGTH = 1112 mm, WIDTH = 13.4 mm, TK = 9.6 mm)**

