

FILTER OVERVIEW WITH SERVICE INTERVALS AND CAPACITIES

5 Series Tractors - 5103, 5103E, 5103S, 5104, 5203, 5204, 5038D (S.N. -009920), (TREM IIIA Engine) (India Edition)

ENGINE

PRIMARY AIR FILTER

[RE68048](#)

SECONDARY AIR FILTER

[RE68049](#)

Replace after every 250 hours and annually.



ENGINE

PRIMARY FUEL FILTER – [RE508953](#)

SECONDARY FUEL FILTER – [RE508954](#)

Replace after every 250 hours.



TRANSMISSION

HYDRAULIC OIL FILTER – [RE45864](#)

(5038D)

MANUAL STEERING – [RE280727](#)

POWER STEERING – [RE280728](#)

Replace initially after 100 hours and 1100 hours
and after every 500 hours and every 1250 hours.

(Click here for [capacity](#))



ENGINE OIL FILTER

[RE507204](#) (FOR INDIA)

[T19044](#) (FOR EXPORT)

Replace initially after 100 hours
and every 250 hours and annually.



JOHN DEERE

Genuine Parts and Service

https://www.deere.com/en_US/parts/parts_by_industry/ag/fmi/filter_maintenance_information.page

CAPACITIES

5 Series Tractors - 5103, 5103E, 5103S, 5104, 5203, 5204, 5038D (S.N. -009920), (TREM IIIA Engine) (India Edition)

CAPACITIES (Approximate):

Fuel Tank:

5103E	50 L (13.2 gal)
5103,5103S,5104,5203,5204,5038D	62 L (16.38 gal)

Transmission and Hydraulic System:

Hy-Gard™

5103,5103E,5103S,5104,5038D	33 L (8.72 gal)
(5203) (w/ Tire Size 13.6 X 28).....	33 L (8.72 gal)
(5203) (w/ Tire Size 14.9 X 28).....	34 L (8.98 gal)
(5204)	34 L (8.98 gal)

[Return to Filter Overview](#)

