

 
# REPLACEMENT PARTS GUIDE

5E Series Tractors - 5060E, 5070E, 5078E (300101-), 5080E, 5090E (300101-), 5060EN, 5080EN (South America Edition)

## CAB



**RECIRCULATION AIR FILTER**  
[RE195491](#) (5060E, 5070E, 5078E, 5080E, 5090E)  
 Clean every 250 hours, 500 hours and annually.



**FRESH AIR FILTER**  
[RE198488](#) (5060E, 5070E, 5078E, 5080E, 5090E)  
 Clean every 250 hours, 500 hours and annually.

**ACTIVATED CARBON AIR FILTER**  
[SJ14288](#) (5060E, 5070E, 5078E, 5080E, 5090E)  
[SJ28834](#)  
 Replace after every 250 hours.

## HYDRAULIC



**OIL FILTER**  
[SJ10672](#) (5060E, 5070E, 5078E, 5080E, 5090E)  
 Replace initially after 100 hours and after every 750 hours and every 1500 hours.

## TRANSMISSION



**OIL FILTER**  
[RE45864](#) (5060E, 5070E, 5078E, 5080E, 5090E)  
[SJ2883](#)  
 Replace initially after 100 hours and after every 750 hours and every 1500 hours.



 
## ENGINE



**PRIMARY AIR FILTER**  
[SU55720](#) (5060E, 5070E, 5080E, 5060EN, 5080EN)  
[RE253518](#) (5090E)



**SECONDARY AIR FILTER**  
[SU29301](#) (5060E, 5070E, 5080E, 5060EN, 5080EN)  
[RE253519](#) (5090E)



Replace after cleaning 3 or 5 times or annually whichever ever occurs first.



**PRIMARY FUEL FILTER**  
[DZ11467](#) (5060E, 5070E, 5080E, 5060EN, 5080EN)



**FINAL FUEL FILTER**  
[RE62418](#) (5060E, 5080EN)  
[RE62419](#) (5090E)



**FUEL TANK FILTER**  
[T257865](#) (5060E, 5070E, 5078E, 5080E, 5090E)

Replace after every 500 hours.



**OIL FILTER**  
[RE507204](#) (for India) (5060E, 5070E, 5080E, 5060EN, 5080EN)  
[T19044](#) (for Export)  
[DZ114256](#) (004294 -)  
[RE504836](#) (5090E)



Replace initially after 100 hours and every 375 hours, 500 hours and annually.

# CAPACITIES

## 5E Series Tractors - 5060E, 5070E, 5078E (300101- ), 5080E, 5090E (300101- ), 5060EN, 5080EN (South America Edition)

### CAPACITIES (Approximate):

#### Fuel Tank:

(5060E, 5070E, 5078E, 5080E, 5090E)	
OOS.....	115 L (30.38 gal)
CAB.....	125 L (33.02 gal)
(5060EN, 5080EN)	
.....	70 L (18.45 gal)

#### Cooling System:

##### Cool-Gard™ II

(5060E, 5070E, 5080E, 5090E, 5060EN, 5080EN)	
.....	11 L (2.9 gal)
(5078E, 50890E)	
.....	18 L (4.75 gal)

#### Transmission and Hydraulic System:

##### Hy-Gard™

(5060E, 5070E, 5078E, 5080E, 5090E)	
Top Shaft Synchronized(TSS).....	40 L (10.57 gal)
PowrReverser™.....	43.5 L (11.49 gal)
(5060EN, 5080EN)	
Partial Synchronous.....	40 L (10.57 gal)

#### Front Axle:

##### Hy-Gard™

(5060E, 5070E, 5078E, 5080E, 5090E)	
Total Capacity.....	5.6 L (1.48 gal)
Front Axle Differential Housing.....	4 L (1.06 gal)
Front Axle Final Drive Housing (each).....	0.8 L (0.211 gal)
(5060EN, 5080EN)	
Total Capacity.....	6 L (1.58 gal)
Front Axle Differential Housing.....	5 L (1.32 gal)
Front Axle Final Drive Housing (each).....	0.5 L (0.13 gal)



# REPLACEMENT PARTS GUIDE

5E Series Tractors - 5060E, 5070E, 5078E (300101- ), 5080E, 5090E (300101- ), 5060EN, 5080EN (South America Edition)

## ENGINE



### CLUTCH DISK

[RE265964](#) (TRACTION)

[RE227648](#) (PTO)

[SJ10903](#)

(Power Reverser™) (5060E, 5070E, 5078E (300101- ), 5080E, 5090E (300101- ))



### BRAKE DISK

[SJ40143](#)

[RE45938](#) (MFWD)

(5060E, 5070E 5080E, 5060EN, 5080EN)

[SJ17870](#) (HAND BRAKE)



### BATTERY

[CQM20060](#)



### FAN BELT DRIVE

[SU62748](#) (5060E, 5070E, 5060EN, 5080E, 5080EN)

[SU55005](#) (OOS)

[SU55006](#) (CAB)

[SU62747](#) (CAB) (LGTH = 1355 MM) (5080E, 5070E) (5080E, 5070E, 5060E)



### ALTERNATOR

[SJ33934](#) (90 A) (5060E, 5070E, 5080E, 5060EN, 5080EN)

[AT417196](#) (90 A) (5078E (300101- ), 5080E, 5090E (300101- ))



## CAB

### SEAT

[SJ17647](#) (5060EN, 5080EN)

[SJ32558](#) (OOS) (5060E, 5070E, 5080E, 5078E (300101- ), 5090E (300101- ))

[DQ63806](#) (Sync Shuttle™) (5060E, 5070E, 5080E, 5078E (300101- ), 5090E (300101- ))

[LVA19859](#) (MECHANICAL SUSPENSION) (OOS) (5060E, 5070E, 5080E, 5078E (300101- ), 5090E (300101- ))



[SJ34185](#) (AIR SUSPENSION) (OOS)(5060E, 5070E, 5080E, 5078E (300101- ), 5090E (300101- ))

[SJ41112](#) (AIR SUSPENSION) (CAB)(5060E, 5070E, 5080E, 5078E (300101- ), 5090E (300101- ))

[SJ41111](#) (MECHANICAL SUSPENSION) (CAB) (5060E, 5070E, 5080E, 5078E (300101- ), 5090E (300101- ))

[DQ58190](#) (BOTTOM) (5060E, 5070E, 5080E)

[DQ58192](#) (BACK) (5060E, 5070E, 5080E)



**JOHN DEERE**

Genuine Parts and Service



# REPLACEMENT PARTS GUIDE

5E Series Tractors - 5060E, 5070E, 5078E (300101- ), 5080E, 5090E (300101- ), 5060EN, 5080EN (South America Edition)

## AXLE

### TIE ROD

[R125541](#) (LH)(TIE ROD ASSEMBLY)  
(2WD)(5060EN, 5080EN)

[RE61848](#) (LH)(TIE ROD END)(2WD)  
(5060EN, 5080EN)

[R125544](#) (RH)(TIE ROD ASSEMBLY)  
(2WD)(5060EN, 5080EN)

[RE61849](#) (RH)(TIE ROD END)(2WD)  
(5060EN)

[RE217616](#) (TIE ROD ASSEMBLY)(2WD)  
(5060E, 5070E, 5080E,

[RE217817](#) (TIE ROD END)(2WD)(5060E,  
5070E, 5080E)

[RE217819](#) (BALL JOINT)(2WD)(5060E,  
5070E, 5080E)

[RE61833](#) (LH)(TIE ROD END)(MFWD)  
(5060EN, 5080EN)

[RE61835](#) (BALL JOINT)(MFWD)  
(5060EN, 5080EN)

[RE61836](#) (RH)(TIE ROD END)(MFWD)  
5060EN, 5080EN)

[SJ28060](#) (RH)(MFWD)(5060E, 5070E, 5080E,  
5078E (S.N. 300101- ), 5090E (S.N. 300101-))

[SJ27160](#) (LH)(MFWD)(5060E, 5070E, 5080E,  
5078E (S.N. 300101- ), 5090E (S.N. 300101-))

[RE271441](#) (TIE ROD END)(MFWD)(5060E,  
5070E, 5080E, 5078E (S.N. 300101- ),  
5090E (S.N. 300101- ))

[SJ27163](#) (BALL JOINT)(MFWD)(5060E,  
5070E, 5080E, 5078E (S.N. 300101- ),  
5090E (S.N. 300101- ))

[RE204877](#) (TIE ROD ASSEMBLY)(MFWD)  
(FOR CKD ARGENTINA)(5060E, 5070E,  
5080E)

[RE204878](#) (90 DEGREE)(MFWD)(FOR  
CKD ARGENTINA)(5060E, 5070E, 5080E)

[RE204879](#) (TIE ROD END)(MFWD)(FOR  
CKD ARGENTINA)(5060E, 5070E, 5080E)

[RE271437](#) (TIE ROD ASSEMBLY)(MFWD,  
DANA )(5090E (S.N. 300101- ))

[RE271440](#) (TIE ROD END)(MFWD, DANA )  
(5090E (S.N. 300101- ))

[RE271441](#) (90 DEGREE)(MFWD, DANA )  
(5090E (S.N. 300101- ))



**JOHN DEERE**

Genuine Parts and Service

CLICK PART NUMBER TO BUY

\*See operator's manual for additional details.