

# REPLACEMENT PARTS GUIDE

## 7000 Series - 7810 Tractor for Airport (South America)

### CAB



**RECIRCULATION AIR FILTER**  
[RE24619](#) (AIR FILTER)  
[RE67829](#) (AIR FILTER)  
Replace annually



**FRESH AIR FILTER**  
[RE48882](#) (AIR INTAKE SYSTEM)  
[RE151778](#) (AIR INTAKE SYSTEM)  
[RE71210](#) (AIR FILTER)  
[RE168908](#) (AIR FILTER)

### HYDRAULIC



**HYDRAULIC OIL FILTER**  
[RE39527](#) (HYDRAULIC OIL FILTER)  
Replace the filters for every 750 hrs.



### ENGINE



**OIL FILTER**  
[RE59754](#)  
Replace the filters for every 750 hrs.



**PRIMARY FUEL FILTER**  
[RE62419](#)  
[RE66797](#)  
[RE508633](#)  
[RE67124](#)  
[RE34963](#)  
[AR86745](#)  
Replace the filters for every 250 hrs.

# CAPACITIES

## 7000 Series - 7810 Tractor for Airport (South America)

**CAPACITIES (Approximate):**

**Fuel Tank:**

Open Operator Station ..... 307 L ( 81 gal)

**Cooling System:**

**Cool-Gard™ II**

Open Operator Station ..... 19 L ( 5 gal)

**Transmission and Hydraulic System:**

**Hy-Gard™**

.....64 L ( 17 gal)

**Mechanical Front Wheel Drive (MFWD) Axle Housing:**

**Hy-Gard™**

.....6.8 L ( 1.8 gal)



# REPLACEMENT PARTS GUIDE

## 7000 Series - 7810 Tractor for Airport (South America)

### CAB



#### SEAT

[RE163029](#) (SEAT CUSHIONS AND SEAT BELT)

### AXLE



#### TIE ROD

[RE161020](#) (TIE ROD ASSEMBLY)  
[R150909](#) (RH)  
[RE161022](#) LH)  
[RE161019](#) (TIE ROD END)



### ENGINE



#### BRAKE DISK

[RE35512](#) (REVERSER WITH TRACTION CLUTCH)  
[R101160](#) (PLANETARY BRAKE)



#### ALTERNATOR

[RE46608](#) (90 A)



#### BATTERY

[DQ25556](#)



#### FAN DRIVE BELT

[R133402](#)