

# REPLACEMENT PARTS GUIDE

444 P (PIN: 1DW444PA\_\_L\_18490-)



## FUEL TANK BREATHER FILTER

[H216169](#)

Interval (hrs) - 1000.



## AXLE OIL FILTERS (IF EQUIPPED)

[AT367635](#)

Interval (hrs) - 1000.



## IN-LINE FUEL FILTER

[AT489745](#)

Interval (hrs) - 500.



## HYDRAULIC RESERVOIR BREATHER

[AM39653](#)

Interval (hrs) - 500.



## DRIVELINE DAMPER

[AT308993](#)

Interval (hrs) - As Required .



## DIESEL EXHAUST FLUID (DEF TANK BREATHER FILTER)

[H216169](#)

Interval (hrs) - 4000.



## ENGINE ROCKER ARM COVER GASKET

[R524499](#)

Interval (hrs) - As Required.



## CAB RECIRCULATION AIR FILTER

[AT307501](#)

Interval (hrs) - As Required.



## CAB FRESH AIR FILTER

[AT191102](#)

Interval (hrs) - As Required .



## HYDRAULIC SYSTEM RETURN FILTER

[AT335977](#)

Interval (hrs) - 4000.



## OPEN CRANKCASE VENTILATION (OCV) FILTER

[DZ105100](#)

Interval (hrs) - 1500.



## AIR CLEANER DUST UNLOADER VALVE

[R48568](#)

Interval (hrs) - 1000.



## ENGINE OIL FILTER

[RE504836](#)

Interval (hrs) - 500.



## PRIMARY FUEL FILTER ELEMENT

[DZ115391](#)

Interval (hrs) - 500.



## SECONDARY FUEL FILTER ELEMENT-

[DZ115390](#)

Interval (hrs) - 500.



## ENGINE AIR FILTER - PRIMARY

[AT178516](#)

Interval (hrs) - 1000.



## ENGINE AIR FILTER- SECONDARY

[AT178517](#)

Interval (hrs) - 1000.



## DIESEL PARTICULATE FILTER (COMPONENT OF EXHAUST FILTER)

[DZ104594](#)

Interval (hrs) - As Required.



## TRANSMISSION OIL FILTER

[AT468647](#)

Interval (hrs) - 2000.



## DIESEL EXHAUST FLUID (DEF) DOSING UNIT FILTER

[DZ114640](#)

Interval (hrs) - 4000.



**JOHN DEERE**

Genuine Parts and Service

CLICK PART NUMBER TO BUY

\*See operator's manual for additional details.

# OIL AND CAPACITIES INFORMATION

444 P (PIN: 1DW444PA\_\_L\_18490-)

Part Description	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil	14.5 L (3.8 gal)	500
John Deere Hy-Gard™ Park Brake Oil <sup>3</sup>	300 mL(10.1 floz)	1000
John Deere Hy-Gard™ Transmission Oil <sup>5</sup>	18.5 L (4.9 gal)	2000
John Deere Hy-Gard™ Front Axle Oil <sup>1,5</sup>	22.0 L (5.8 gal.)	2000
John Deere Hy-Gard™ Rear Axle Oil <sup>1,5</sup>	22.0 L (5.8 gal.)	2000
John Deere Hydrau™ Hydraulic System Oil <sup>5</sup>	83.3 L (22.0 gal.)	4000
John Deere Cool-Gard™II Pre-Mix	19.0 L (5.0 gal.)	6000
Coolant Extender	As Required	-

# OIL AND CAPACITIES INFORMATION

444 P (PIN: 1DW444PA\_\_L\_10283— )

Fluid Analysis Kits <sup>6</sup>			
Part Description	Part Number	Qty or capacity	Change Interval In Hours
Diesel Engine Oil	<a href="#">AT346594</a>	1	250
Transmission Oil	<a href="#">AT346594</a>	1	500
Axle Oil	<a href="#">AT346594</a>	2	500
Park Brake Oil	<a href="#">AT346594</a>	1	500
Hydraulic Oil	<a href="#">AT346594</a>	1	500
Diesel Fuel	<a href="#">TY27329</a>	1	500
Engine Coolant	<a href="#">TY27787</a>	1	500

<sup>1</sup>Perform initial service once after the first 250 hours of operation.  
<sup>3</sup>Reduce drain interval to 500 hours for deep mud, water, or snow operation.  
<sup>5</sup>See operator's manual for recommended oil type and oil viscosities based on operating temperatures.  
<sup>6</sup>Based on fluid analysis results, intervals may need to be adjusted for operating conditions. See an authorized John Deere dealer.

Plus-50 is a trademark of Deere & Company

Hy-Gard is a trademark of Deere & Company

Hydrau is a trademark of Deere & Company

Cool-Gard is a trademark of Deere & Company

## Service Intervals

As Required	
<input type="checkbox"/> Check windshield washer fluid level	<input type="checkbox"/> Inspect engine air cleaner elements
<input type="checkbox"/> Check cab fresh air filter	<input type="checkbox"/> Inspect serpentine belt
<input type="checkbox"/> Check cab recirculation filter	<input type="checkbox"/> Clean cooler cores
<input type="checkbox"/> Check and clean precleaner housing (if equipped)	<input type="checkbox"/> Drain water from primary fuel filter with water separator
<input type="checkbox"/> Check and clean heating and air conditioning housing	<input type="checkbox"/> Service exhaust filter
<input type="checkbox"/> Inspect tires and check pressure	<input type="checkbox"/> Drain, flush, and refill fuel tank
<input type="checkbox"/> Check wheel bolt torque	<input type="checkbox"/> Lubricate cab door hinges
<input type="checkbox"/> Clean hydraulic pump case drain in-line screen	<input type="checkbox"/> Clean debris from around coupler lock cylinder (if equipped)
<input type="checkbox"/> Check rear camera and radar object detection (ROD) system (if equipped)	<input type="checkbox"/> Clean and tighten battery terminals
Every 10 Hours or Daily	
<input type="checkbox"/> Clean air cleaner dust unloader valve	<input type="checkbox"/> Check hydraulic system oil level
<input type="checkbox"/> Check coolant level at surge tank	<input type="checkbox"/> Check transmission oil level
<input type="checkbox"/> Check engine oil level	
Every 100 Hours	
<input type="checkbox"/> Lubricate loader linkage and cylinder pivots	<input type="checkbox"/> Lubricate coupler lock pins (if equipped)
Initial Service - 250 Hours	
<input type="checkbox"/> Drain and refill front and rear axle oil	<input type="checkbox"/> Replace axle oil filters (if equipped)
Every 250 Hours	
<input type="checkbox"/> Take engine oil sample	
Every 500 Hours	
<input type="checkbox"/> Lubricate driveline upper and lower sliding joints <sup>2</sup>	<input type="checkbox"/> Replace in-line fuel filter
<input type="checkbox"/> Check hybrid battery electrolyte level (if equipped)	<input type="checkbox"/> Lubricate front and rear shaft seals on park brake
<input type="checkbox"/> Replace hydraulic reservoir breather filter	<input type="checkbox"/> Check ride control accumulator (if equipped)
<input type="checkbox"/> Check front and rear axle oil level	<input type="checkbox"/> Take axle oil sample
<input type="checkbox"/> Check air intake hoses and charge air cooler tube couplings	<input type="checkbox"/> Take transmission oil sample
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Replace primary fuel filter with water separator	<input type="checkbox"/> Take park brake oil sample
<input type="checkbox"/> Replace final fuel filter	<input type="checkbox"/> Take diesel fuel sample
<input type="checkbox"/> Check park brake oil level	<input type="checkbox"/> Take engine coolant sample
Every 1000 Hours	
<input type="checkbox"/> Replace air cleaner dust unloader valve	<input type="checkbox"/> Replace axle oil filters (if equipped)
<input type="checkbox"/> Replace engine air cleaner elements	<input type="checkbox"/> Lubricate frame hinge pivots <sup>2</sup>
<input type="checkbox"/> Replace fuel tank breather filter	<input type="checkbox"/> Drain and refill park brake oil <sup>3</sup>
<input type="checkbox"/> Check coolant condition	

## Service Intervals

Every 1500 Hours	
<input type="checkbox"/> Replace open crankcase ventilation (OCV) filter	
Every 2000 Hours	
<input type="checkbox"/> Drain and refill transmission oil and replace filter	<input type="checkbox"/> Check and adjust engine valve lash
<input type="checkbox"/> Drain and refill front and rear axle oil	<input type="checkbox"/> Rerun transmission clutch calibration (cab monitor)
<input type="checkbox"/> Clear front and rear axle oil recirculation screens (if equipped)	
Every 4000 Hours	
<input type="checkbox"/> Replace diesel exhaust fluid (DEF) tank breather filter	<input type="checkbox"/> Drain, flush, and refill hydraulic system oil
<input type="checkbox"/> Replace diesel exhaust fluid (DEF) dosing unit filter <sup>4</sup>	<input type="checkbox"/> Clean hydraulic system fill strainer
<input type="checkbox"/> Replace hydraulic system return filter	
Every 5000 Hours	
<input type="checkbox"/> Check driveline damper for cracks	
Every 6000 Hours	
<input type="checkbox"/> Drain and refill cooling system	