




REPLACEMENT PARTS GUIDE


316GR Skid Steer Loader (PIN: 1T0316G__J366358-)





 **CAB RECIRCULATION AIR FILTER ELEMENT (IF EQUIPPED)**
[AT359416](#)
Interval (hrs) - As Required.

 **CAB FRESH AIR FILTER ELEMENT (IF EQUIPPED)**
[AT441536](#)
Interval (hrs) - As Required.


 **DUST UNLOADER VALVE**
[M89679](#)
Interval (hrs) - As Required.


 **HYDRAULIC OIL RESERVOIR BREATHER**
[AT443309](#)
Interval (hrs) - 1000.


 **HYDRAULIC OIL FILTER ELEMENT**
[AT314164](#)
Interval (hrs) - 1000.


 **ENGINE ROCKER ARM COVER GASKET**
[MIU802182](#)
Interval (hrs) - 1500.





 **ENGINE AIR FILTER ELEMENT - PRIMARY**
[AT338105](#)
Interval (hrs) - As Required.


 **ENGINE AIR FILTER ELEMENT - SECONDARY**
[AT336803](#)
Interval (hrs) - As Required.

 **FUEL TANK BREATHER**
[H216169](#)
Interval (hrs) - 1000.

 **DIESEL PARTICULATE FILTER (COMPONENT OF EXHAUST FILTER)**
[MIU802216](#)
Interval (hrs) - As Required.

 **ENGINE OIL FILTER ELEMENT**
[MIU800650](#)
Interval (hrs) - 500.

 **FINAL FUEL FILTER ELEMENT**
[MIU805005](#)
Interval (hrs) - 500.

 **PRIMARY FUEL FILTER AND WATER SEPARATOR**
[MIU802421](#)
Interval (hrs) - 500.



OIL AND CAPACITIES INFORMATION

316GR Skid Steer Loader (PIN: 1T0316G__ _J366358-)

Part Description	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil ³	7.5 L (2.0 gal)	500
John Deere Hydrau™ Hydraulic and Hydrostatic System Oil ³	22.7 L (6.0 gal)	1000
John Deere Hy-Gard™ Oil ³ (per side) (312GR, 314G, 316GR, and 318G only)	14.3 L (3.8 gal)	1000
John Deere Cool-Gard™ II Pre-Mix (316GR, 317G and 318G only)	12.0 L (3.2 gal)	6000
Fluid Analysis Kits ⁴		
Diesel Engine Oil	1	500
Hydraulic Oil	1	500
Diesel Fuel	1	500
Engine Coolant	1	500
³ For recommended oil types and oil viscosities based on operating temperatures, see operator's manual. ⁴ Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult an authorized John Deere dealer.		

Plus-50 is a trademark of Deere & Company

Hy-Gard is a trademark of Deere & Company

Hydrau is a trademark of Deere & Company

Cool-Gard is a trademark of Deere & Company



Service Interval

As Required	
<input type="checkbox"/> Check and clean cooling package	<input type="checkbox"/> Check fuel tank breather
<input type="checkbox"/> Check tire pressure (312GR, 314G, 316GR, and 318G only)	<input type="checkbox"/> Replace primary and secondary engine air filter elements
<input type="checkbox"/> Check wheel lug nut torque (312GR, 314G, 316GR, and 318G only)	<input type="checkbox"/> Check and drain primary fuel filter and water separator
<input type="checkbox"/> Replace cab fresh air filter element (if equipped)	<input type="checkbox"/> Check accessory drive belt
<input type="checkbox"/> Replace cab recirculation air filter element (if equipped)	<input type="checkbox"/> Service exhaust filter
<input type="checkbox"/> Lubricate steering centering mechanism (if equipped) ¹	
Every 10 Hours or Daily	
<input type="checkbox"/> Check engine oil level	<input type="checkbox"/> Check hydraulic oil level
<input type="checkbox"/> Check coolant level	<input type="checkbox"/> Lubricate boom linkage, cylinder, and Quik-Tatch™ pivot points
Every 50 Hours	
<input type="checkbox"/> Check and clean dust unloader valve	<input type="checkbox"/> Lubricate Quik-Tatch™ engagement pins
<input type="checkbox"/> Check track tension (317G only)	
Every 100 Hours	
<input type="checkbox"/> Check and adjust accessory drive belt tension (machines without air conditioning only)	
Every 250 Hours	
<input type="checkbox"/> Take engine oil sample	
Every 500 Hours	
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Replace primary fuel filter and water separator	<input type="checkbox"/> Take engine coolant sample
<input type="checkbox"/> Replace final fuel filter	<input type="checkbox"/> Take diesel fuel sample
<input type="checkbox"/> Drain water and sediment from fuel tank	<input type="checkbox"/> Lubricate steering linkage (if equipped) ¹
<input type="checkbox"/> Check chain case oil level (312GR, 314G, 316GR, and 318G only)	<input type="checkbox"/> Lubricate foot pedals (if equipped) ¹
Every 1000 Hours	
<input type="checkbox"/> Drain and refill hydraulic oil and replace filter	<input type="checkbox"/> Check coolant condition
<input type="checkbox"/> Replace hydraulic oil reservoir breather	<input type="checkbox"/> Replace fuel tank breather
<input type="checkbox"/> Drain and refill chain case oil (312GR, 314G, 316GR, and 318G only)	<input type="checkbox"/> Drain and refill hydrostatic motor brake cavity oil (317G only)
Every 1500 Hours	
<input type="checkbox"/> Check and adjust engine valve lash	
Every 6000 Hours	