

REPLACEMENT PARTS GUIDE

337E Knuckleboom Log Loader (PIN: 1T0337ED__C306736—)



ENGINE AIR FILTER—PRIMARY ELEMENT

[AT300487](#)

Interval (hrs) - 500.



ENGINE AIR FILTER—SECONDARY ELEMENT

[AT314583](#)

Interval (hrs) - 500.



AIR CLEANER DUST UNLOADER VALVE

[M89679](#)

Interval (hrs) - As Required.



ENGINE ROCKER ARM COVER GASKET

[R524469](#)

Interval (hrs) - 2000.



ENGINE CRANKSHAFT DAMPER

[RE505881](#)

Interval (hrs) - 4000.



CASE DRAIN FILTER

[T319172](#)

Interval (hrs) - 2000.



HYDRAULIC OIL RETURN FILTER ELEMENT

[F061786](#)

Interval (hrs) - 1000.



PILOT FILTER ELEMENT

[F437580](#)

Interval (hrs) - 1000.



HYDRAULIC TANK BREATHER FILTER

[T225008](#)

Interval (hrs) - 2000.



ENGINE OIL FILTER ELEMENT

[RE504836](#)

Interval (hrs) - 500.



PRIMARY FUEL FILTER ELEMENT

[RE541922](#)

Interval (hrs) - 500.



FINAL FUEL FILTER ELEMENT

[RE522878](#)

 
Interval (hrs) - 1000.



FUEL TANK BREATHER

[T231314](#)


Interval (hrs) - 2000.



CAB RECIRCULATING AIR FILTER

[AT307501](#)

 Interval (hrs) - As Required.



CAB FRESH AIR FILTER

[AT191102](#)

Interval (hrs) - As Required.







JOHN DEERE
Genuine Parts and Service

CLICK PART NUMBER TO BUY

*See operator's manual for additional details.

OILS AND CAPACITIES INFORMATION

337E Knuckleboom Log Loader (PIN: 1T0337ED__C306736—)

Part Description	Part Number	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil ² 	TY26674	20.0 L (5.3 gal)	500
API GL-5 Swing Gear Case Oil ² 	TY6296	5.3 L (1.4 gal)	1000
John Deere Hydrau™ Hydraulic Oil ² 	TY27367	"151.4 L (40.0 gal)	2000
John Deere Cool-Gard™ II Pre-Mix 	TY26575	"21.2 L (5.6 gal)	6000
Fluid Analysis Kits ³			
Diesel Engine Oil	AT346594	1	500
Hydraulic Oil	AT346594	1	500
Swing Gear Case Oil	AT346594	1	500
Diesel Fuel	AT180344	1	500
Engine Coolant	TY27787	1	500
² See operator's manual for recommended oil type and oil viscosities based on operating temperatures. ³ Based on fluid analysis results, intervals may need to be adjusted for operating conditions. consult a local John Deere dealer.			

Plus-50 is a trademark of Deere & Company
 Hy-Gard is a trademark of Deere & Company
 Hydrau is a trademark of Deere & Company
 COOL-GARD is a trademark of Deere & Company

337E Knuckleboom Log Loader (PIN: 1T0337ED__C306736—)

As Required	
• Check and clean air cleaner dust unloader valve	• Check and clean radiator and oil cooler fins
• Check windshield washer fluid level	• Check engine fan belt
Every 10 Hours or Daily	
• Lubricate grapple rotator and pins	• Check hydraulic oil level
• Lubricate boom, arm, and cylinder pivots	• Check and drain primary fuel filter and water separator
• Lubricate swing bearing and pinion	• Check and drain final fuel filter
• Lubricate stabilizer and stabilizer cylinder pins	• Check swing gear case oil level
• Check engine coolant level	• Check fire extinguisher
• Check engine oil level	
Every 100 Hours	
• Lubricate rotary manifold	
Initial Service—250 Hours	
• Check mounting hardware torque on truck, trailer, or carrier	
Every 250 Hours	
• Take engine oil sample	
Every 500 Hours	
• Drain and refill engine oil and replace filter	• Check air intake hose
• Replace primary fuel filter and water separator	• Take hydraulic oil sample
• Replace final fuel filter	• Take swing gear case oil sample
• Drain water and sediment from fuel tank sump	• Take engine coolant sample
• Check battery electrolyte level and terminals	• Take diesel fuel sample
• Check swing bearing mounting cap screws	
Every 1000 Hours	
• Inspect cab fresh air filter	• Drain and refill swing gear case oil
• Inspect cab recirculating air filter	• Lubricate swing gear case
• Replace engine air filters	• Check mounting hardware torque on truck, trailer, or carrier
• Replace hydraulic oil return filter	• Check coolant condition
• Replace pilot filter	
Every 2000 Hours	
• Drain and refill hydraulic oil	• Replace fuel tank breather
• Check and adjust engine valve lash	• Replace case drain filter
• Replace hydraulic tank breather filter	
Every 4000 Hours	
• Replace engine crankshaft damper	
Every 6000 Hours	
• Drain and refill engine cooling system	