


FILTER OVERVIEW WITH SERVICE INTERVALS AND CAPACITIES

8R Interim Tier 4/Stage III B Tractors – 8235R, 8260R, 8285R, 8310R, 8335R, 8360R

CAB

RECIRCULATION FILTER – [RE291412](#)

Replace after every 1000 hours, annually or as required, whichever occurs first.

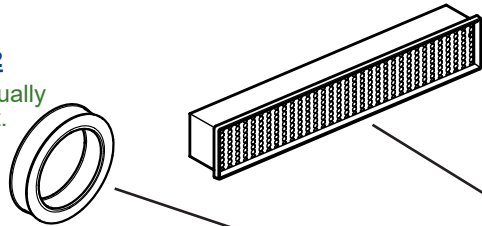

CAB

CAB FRESH AIR FILTER – [RE284091](#)

Replace after every 1000 hours, annually or as required, whichever occurs first.

(Interval may vary according to operating conditions.)

ENGINE

SECONDARY AIR FILTER – [RE587794](#)

Replace after every 1000 hours or as indicated, whichever occurs first.

ENGINE

PRIMARY AIR FILTER – [RE587793](#)

Clean after every 250 hours and as required.

Replace after every 1000 hours, annually or as indicated, whichever occurs first.

SCV

OIL FILTER – [RE269061](#)




HYDRAULIC/TRANSMISSION

OIL FILTER – [RE210857](#)

Replace after every 1500 hours or as indicated, whichever occurs first.

(Click here for [capacity](#))

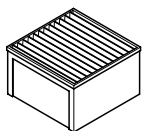

ENGINE

FUEL WATER SEPARATOR FILTER – [N378886](#) (if equipped)

Clean after every 500 hours, then after every fifth back flushing of water separator assembly or as necessary.

ENGINE

DIESEL PARTICULATE FILTER –

[RE541834](#) (8235R, 8260R, 8285R)

[RE542183](#) (8310R, 8335R, 8360R)


Replace within 250 hours after warning light indicators are illuminated. See your John Deere dealer or qualified service provider.

ENGINE

FUEL TANK VENT FILTER – [H216169](#)

Clean after every 1000 hours and replace after every 1500 hours.

(Interval may vary according to operating conditions.)

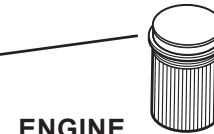

ENGINE

OIL FILTER – [RE509672](#)

Initial oil and filter change at 100 hours and then after every 500 hours or annually, whichever comes first.

The extended 500 hour interval is only allowed if using Plus-50™ II oil with a John Deere filter and diesel fuel with sulfur content less than 15mg/kg (15ppm).

If all the conditions are not met, change oil and filter at 250 hours of operation.

(Click here for [capacity](#))

ENGINE

(ENGINE OPTION CODE 3521)

PRIMARY FUEL FILTER – [RE539465](#)

SECONDARY FUEL FILTER – [RE533910](#)

(ENGINE OPTION CODE 3523)

FUEL FILTER KIT – [RE525523](#)

(INCLUDES BOTH PRIMARY AND FINAL FUEL FILTERS)

Replace after every 500 hours, annually, or as indicated whichever comes first. Always replace both filters at same time.



JOHN DEERE

Genuine Parts and Service

CAPACITIES

8R Interim Tier 4/Stage III B Tractors – 8235R, 8260R, 8285R, 8310R, 8335R, 8360R

CAPACITIES (Approximate):

Fuel Tank:

..... 695 L (184.0 gal)

Cooling System:

Cool-Gard™ II

..... 41 L (10.8 gal)

Transmission / Hydraulics:

Hy-Gard™

MFWD 165 L (43.0 gal)

Independent Link Suspension (ILS™)..... 175 L (46.0 gal)

Crankcase 2WD or 1300 MFWD:

Plus-50™ II

8235R, 8260R, 8285R..... 25 L (6.6 gal)

Crankcase 1500 MFWD:

Plus-50™ II

..... 28 L (7.4 gal)

Crankcase Independent Link Suspension:

Plus-50™ II

..... 27.5 L (7.3 gal)

1300 MFWD Axle Housing:

Hy-Gard™

..... 13.6 L (3.6 gal)

1500 MFWD Axle Housing:

Hy-Gard™

..... 18.7 L (4.9 gal)

MFWD Hubs (Each):

GL-5

..... 3.8 L (1.0 gal)

[Return to Filter Overview](#)

