


# FILTER OVERVIEW WITH SERVICE INTERVALS AND CAPACITIES

4R Final Tier 4 (FT4) Series Compact Utility Tractors - 4044R(L00001-), 4052R(L00001-), 4066R(L00001-)

## CAB FRESH AIR FILTER - [MIU10010](#)

Clean or replace after every 50 hours and as required.



## ENGINE DIESEL PARTICULATE FILTER (DPF) (4044R, 4052R) - [MIU803276](#) (4052R, 4066R) - [MIU802216](#)

See your John Deere™ dealer or qualified service provider.



## HYDRAULIC HYDRAULIC OIL FILTER - [LVA10419](#)

Replace after every 400 hours.  
(Click here for [capacity](#))




## TRANSMISSION OIL FILTER - [RE45864](#)

Replace after every 400 hours change every 1200 hours or 3 years.  
(Click here for [capacity](#))




## CAB RECIRCULATION AIR FILTER - [MIU10011](#) (2)

Clean or replace after every 50 hours and as required.

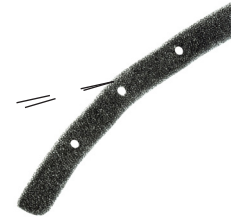

## ENGINE PRIMARY AIR FILTER - [RE68048](#) SECONDARY AIR FILTER - [RE68049](#)

Check after every 600 hours and replace as required.

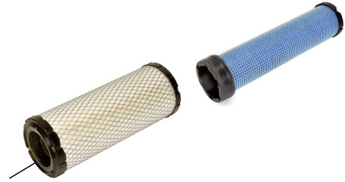

## ENGINE OIL FILTER - [M806419](#)

Replace after every 400 hours or annually, whichever occurs first.  
(Click here for [capacity](#))



## ENGINE PRIMARY FUEL FILTER - [MIU802421](#) FINAL FUEL FILTER - [MIU803127](#)

Replace after every 400 hours or annually, whichever occurs first.



# CAPACITIES

## 4R Final Tier 4 (FT4) Series Compact Utility Tractors - 4044R(L00001-), 4052R(L00001-), 4066R(L00001-)

### CAPACITIES (Approximate):

#### Fuel Tank:

Open Operator Station ..... 56.9 L (15 gal)  
Cab ..... 55.6 L (14.7 gal)

#### Front Axle: Hy-Gard™

..... 5 L (1.3 gal)

[Return to Filter Overview](#)

#### Cooling System:

##### Cool-Gard™ II

Open Operator Station ..... 6.4 L (1.4 gal)  
Cab ..... 7.6 L (1.7 gal)

#### Crankcase with Filter:

##### Plus-50™ II

..... 5.3 L (1.2 gal)

#### Transmission and Hydraulic System:

##### Hy-Gard™

..... 47.3 L (12.5 gal)

